

PocketBook

Obreey

User Manual

PocketBook SURFpad 3^{7,85"}



Contents

SAFETY PRECAUTIONS	5
Storage, Carriage and Usage Conditions	5
Maintenance	6
RF Safety	6
Utilization	7
APPEARANCE	8
TECHNICAL SPECIFICATIONS	9
GETTING STARTED	10
Charging The Battery	10
Unlock Your Device	11
Home Screen	11
Display Views	12
Finger Gestures	13
Extended Home Screen	13
Using the On-screen Keyboard	14
Menus	15
Establishing Wi-Fi	15
Inserting Micro SD Card	16
Mobile Networks Connection	16
SOFTWARE	18
Manage Data	18
Application Launching	19
Creating Folders on the Home Screen	20
Application Removing	21
List of Opened Applications	21
Preinstalled Applications	23
PBI Packages Support	24
Listen to the Music	25

Music Library	25
Gallery	26
MX Player	26
Camera	27
Photo and Video Modes	27
Browser	27
Email	28
Setting Up the Account	28
Inbox	28
SETTINGS	29
Language & Input	31
Sound Settings	32
Display Settings	33
Storage	34
Connecting Devices to Your Tablet	34
Unmounting External Memory and Devices	34
Location Access and Security	35
Date & Time	35
Restore Your Tablet to Factory Settings	36
Battery Charge State	37
Wi-Fi Connection	38
Connecting to Wi-Fi Network with Automatically Obtained IP-address	38
Connection to Wi-Fi Network with Manual Configuring Network Settings	39
Advanced Options	40
Turn off Wi-Fi	40
Bluetooth	40
Transferring Data	41
Information about Apps	41

FIRMWARE UPDATE	43
Automatic Update	43
Manual Update	44
Troubleshooting	45
CUSTOMER SUPPORT	46
COMPLIANCE WITH INTERNATIONAL STANDARDS	47

Safety Precautions

Before start working with the Device, please, read this section carefully. Following these instructions will help you ensure your safety and extend service life of the Device.

Storage, Carriage and Usage Conditions

Device operating temperature range is 0°C to +40°C, so don't expose the Device to excessively high or low temperatures. Never leave cables near heat sources. Heated cables or their insulation may become deformed or damaged, which could lead to fire or electric shock.

Try to avoid next impacts:

- direct sunlight
- direct flame or smoke (cigarette, lighter, open fire etc.)
- exposure to liquids or damp (do not use the Device in the rain, in the street at higher humidity, near bodies of water etc.)
- penetration of liquids or moisture
- exposure to strong electromagnetic fields, electrostatic charges and artificial sources of UV electromagnetic radiation
- excessive mechanical pressure on the screen, connectors and keys of the Device.

Do not leave the Device for a long time in poorly ventilated environment, e.g. in a car or in closed tight boxes/packaging.

Neither drop nor try to bend the Device. Protect the screen from objects that may scratch or damage it. To ensure adequate protection of the screen, we recommend storing the Device in a protective and/or hard cover.

Keep away from children.

Maintenance

Do not disassemble or modify the book reader.

Do not use the Device with a damaged battery, charger (broken case, poor contact, broken feed cable) or SD card. If the battery is damaged (cracked case, leakage of electrolyte, off-shape etc.) it should be replaced by the authorized personnel. Usage of home-made or modified batteries may cause an explosion and/or damage the Device.

Do not use organic or inorganic solvents (e.g. benzoyl etc.) to clean the screen/case. Use a soft cloth to remove dust from the Device's surface. Apply a few drops of distilled water to remove dirt.

Up to five faulty pixels are acceptable in the screen and do not constitute a warrantable defect of the screen.

When the product guarantee term is out of expiration, please contact the nearest authorized service to diagnose whether the Device can be used safely.

For detailed information about service centers in your region please visit the official website of PocketBook International: <http://www.pocketbook-int.com/support/>.

RF Safety

The Device receives and transmits radio frequencies and may interfere with radio communications and other electronic equipment. If you use personal medical Devices (e.g. a pacemaker or hearing aid) please contact your doctor or the manufacturer to learn whether or not such medical devices are protected against external RF signals.

Do not use wireless communication in places where it is prohibited, e.g. onboard a plane and in hospitals – this may affect airborne avionics or medical equipment.




Utilization

Incorrect disposal of this Device may have adverse impacts on the environment and public health. To prevent such consequences follow the device-specific disposal requirements. Recycling of these materials helps preserve natural resources. For more information regarding recycling issues please contact local municipal authorities, your domestic waste collection service, store where you purchased the Device, or the authorized service center.

Disposal of electric and electronic components (the Directive is applicable to the EU and other European countries where separate waste disposal systems exist). In other countries dispose batteries accordingly to local laws.

Do not destroy the battery by burning it to avoid the danger of explosion!

Appearance

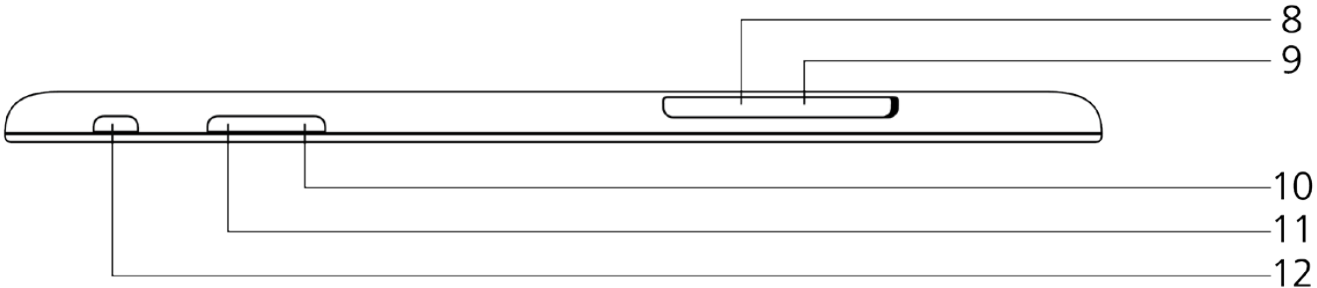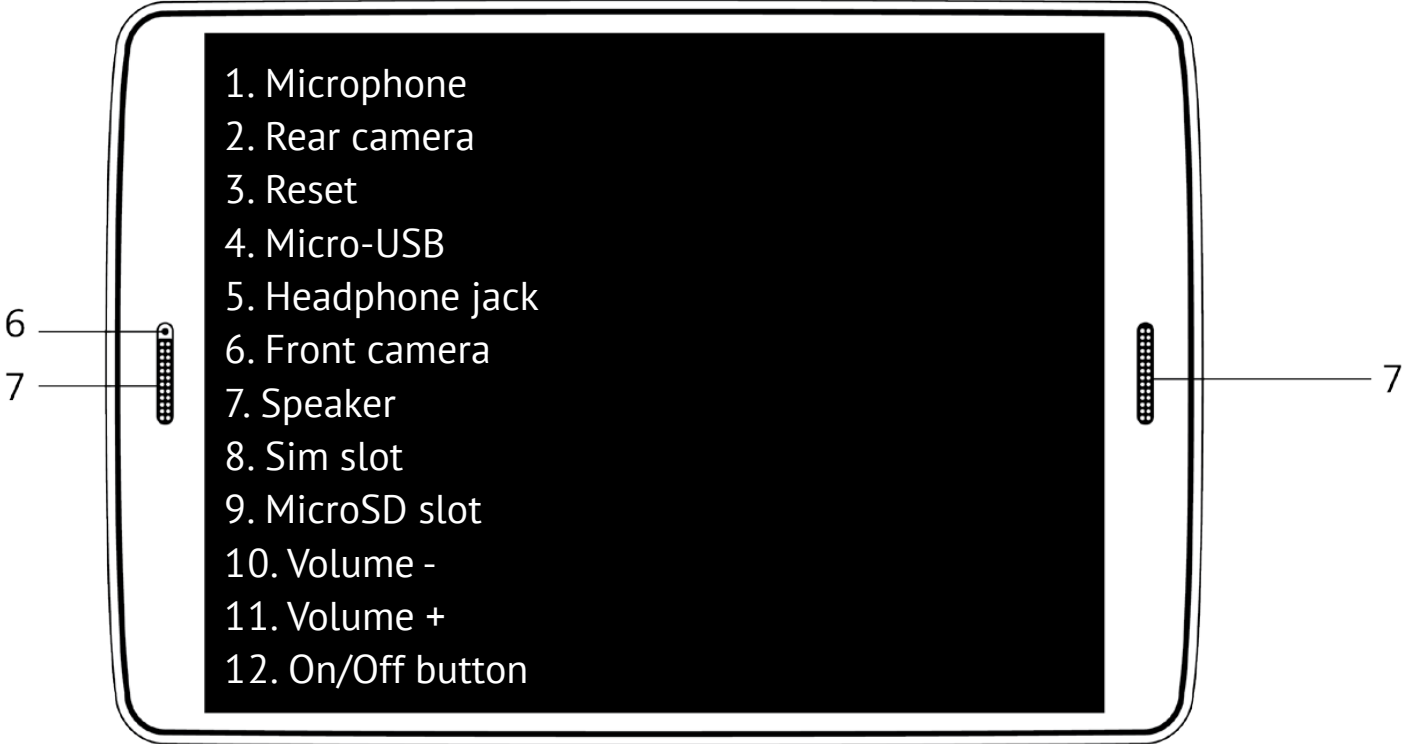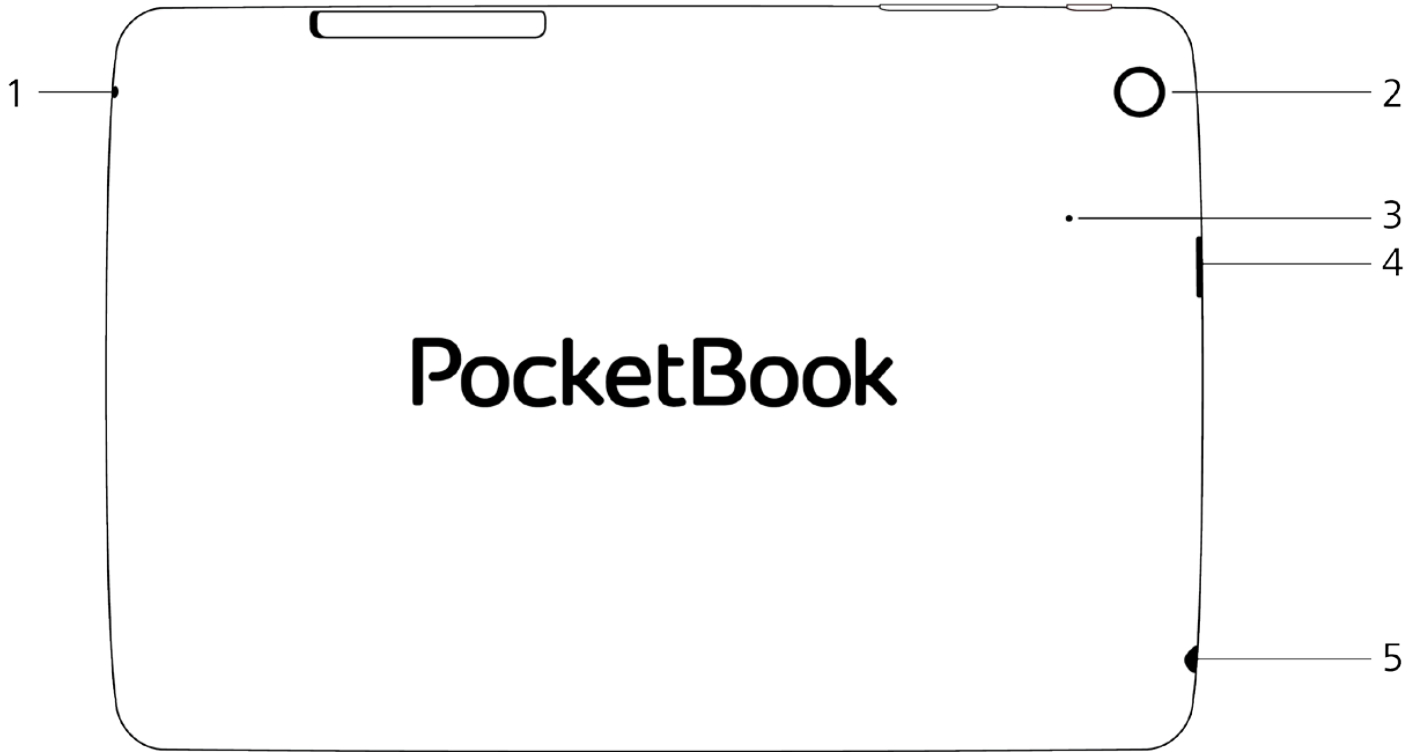

Technical Specifications

Display 7,85" touch screen 1024x768

Processor 1,5 GHz

RAM 1 GB

Internal Storage 16 GB *

Platform Android™ 4.2

Input/Output Ports 1×micro USB, 3.5 mm audio jack, microphone

Card reader micro SD (SDXC/SDHC) up to 2 TB

Communications Wi-Fi (b/g/n), 3G (HSDPA/UMTS), GPS, Bluetooth

Camera Rear – 5 Megapixels,
Front – 0,3 Megapixels

Audio Speaker, microphone

Accelerometer Yes

Battery Li-Polymer, 4000 mAh **

Dimensions 200.15×136×8,9 mm

Weight 346g

Text Formats epub, fb2, txt, doc, rtf, html, chm, tcr, pdf, pml

Image Formats JPEG, PNG, BMP, GIF

Audio Formats MP3, WMA, AAC

Video Formats MKV, AVI, MP4, FLV, WEBM, 3GP, MOV, MPG, WMV, divX, Xvid, mpeg-4 SP, mpeg-4, ASF, VC1, H264, H263, wmv 9, MPEG-1, MPEG-2

* The actual available internal storage size may vary depending on the software configuration of your device


** Battery life and values mentioned above might vary depending on usage mode, connectivity and settings

Getting Started

CHARGING THE BATTERY

The battery of your Device is not fully charged as you unpack it, so you need to charge it for 8-10 hours. It's strongly recommended to keep the Device off during the first charge, otherwise power consumption may be more, than charging, especially when you charge it from PC. Follow next steps to charge the battery:

1. Make sure the Device is off. In opposite case, press **On/Off** button for a few seconds and select *Power Off* in menu appeared. The Device will shut down.
2. Connect your Device to a computer or power supply using the microUSB cable included in package.
 - Connect a USB cable to the jack of the Device:

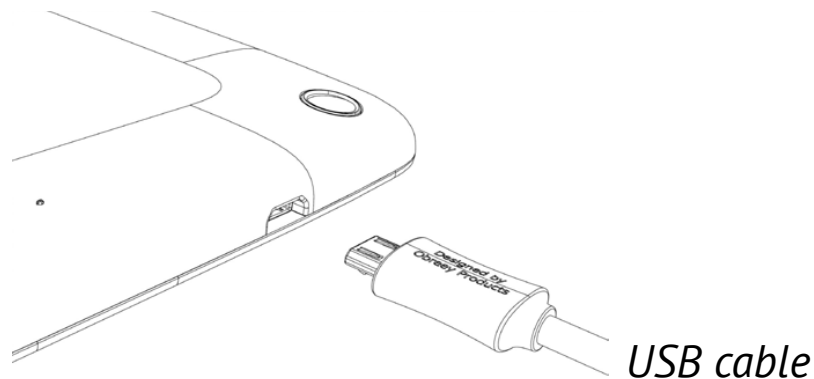



ATTENTION! Incorrect connection of the USB cable can seriously damage the Device. Damages of the Device, caused by incorrect connection, aren't covered by warranty.

- While the USB cable is connected, the Device should be near to PC/charger.

NOTE It's recommended to charge the battery using the charging device. In case if you charge the battery from PC, it's better to keep the Device off, because power consumption may be more, than charging.

UNLOCK YOUR DEVICE


Tap and drag the lock out of the circle to one of icons to unlock your Device.

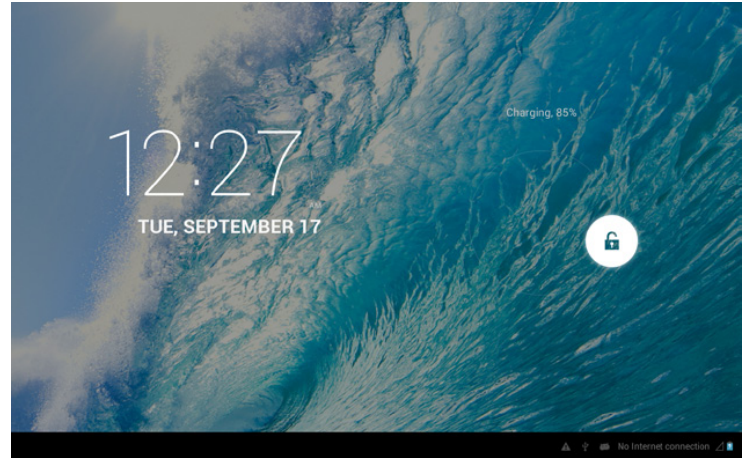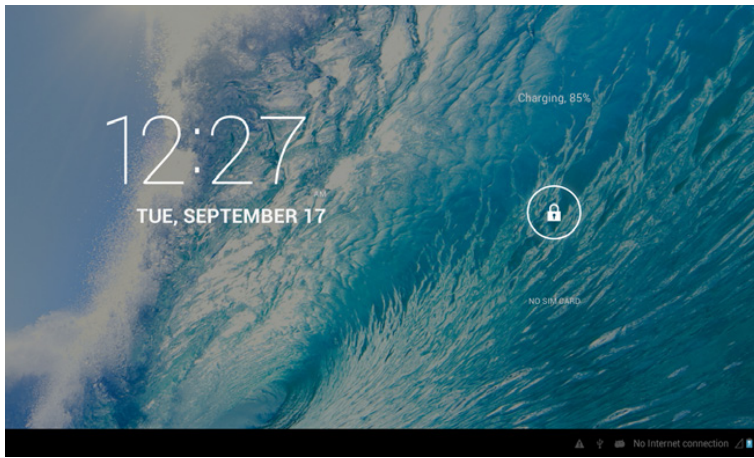

HOME SCREEN

Search in Google or Yandex

Applications

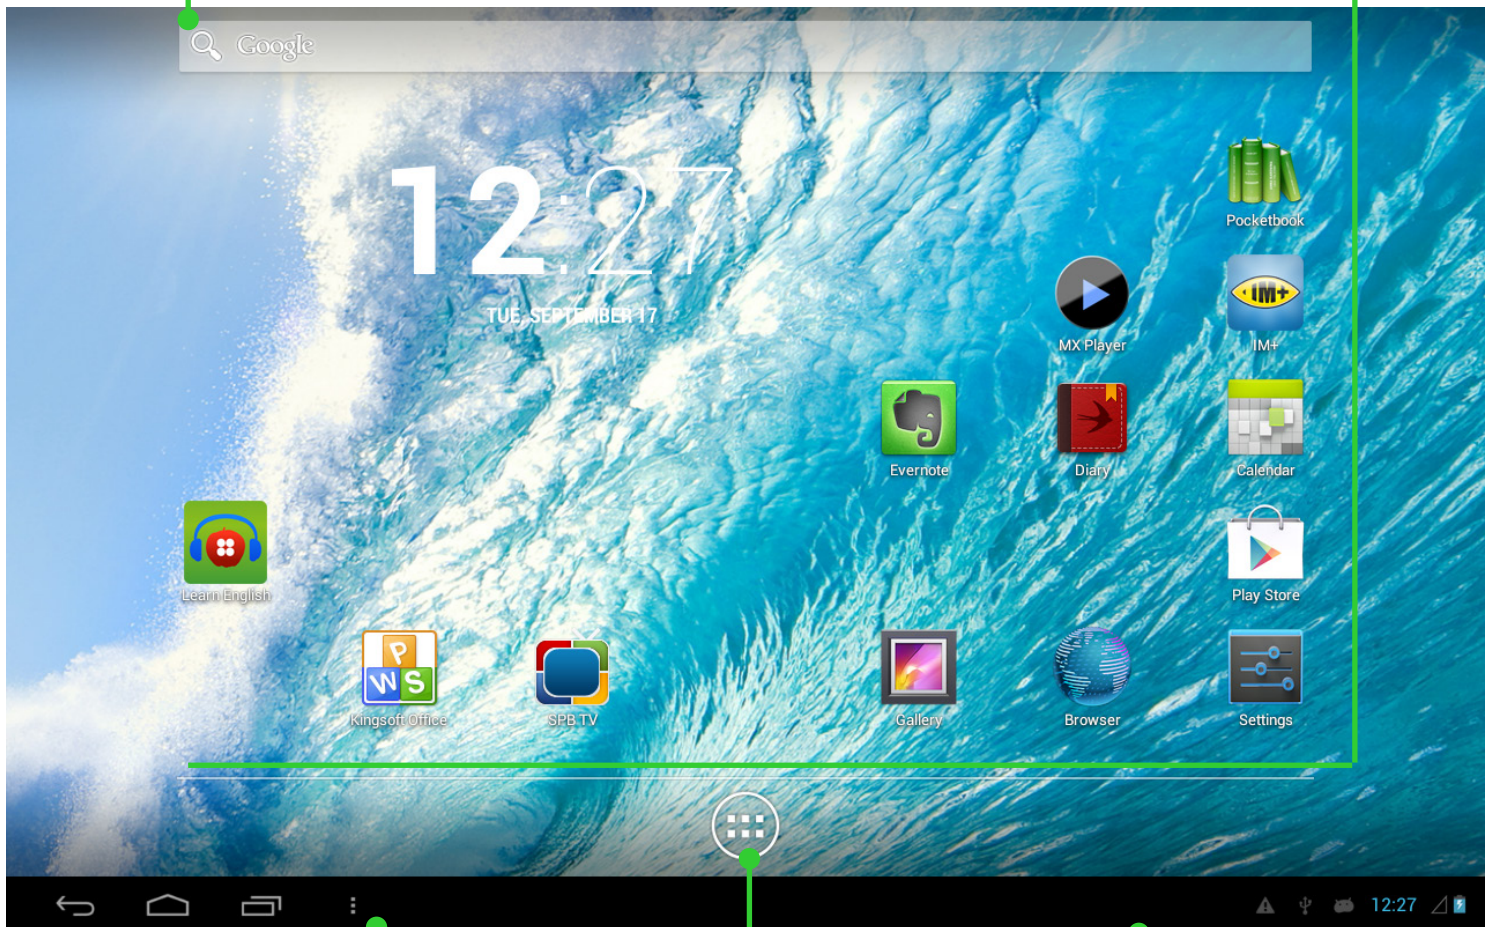

Back - return to the previous screen

Return to Home Screen

Last opened applications

Application/section menu


Notification area

Open a list of applications and widgets


DISPLAY VIEWS

The screen orientation is changed automatically when you hold the Device horizontally to vertically, and vice versa. To enable/disable screen auto-rotation, go to *Settings > Device > Display*.

Landscape view

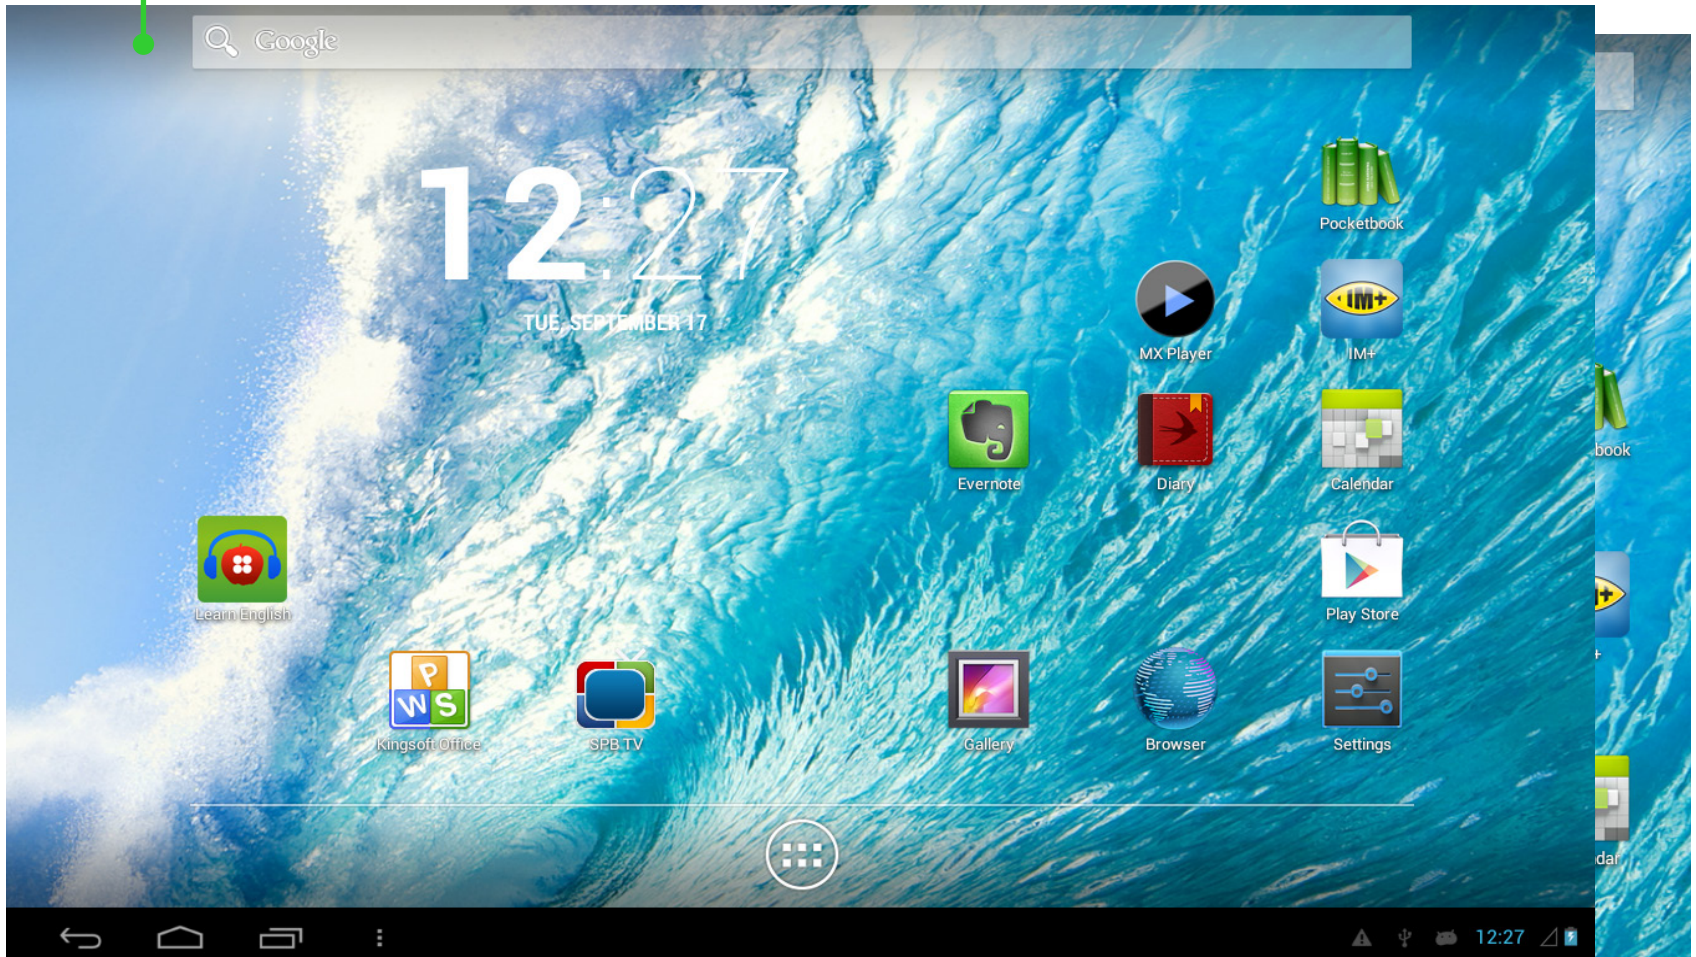

Portrait view

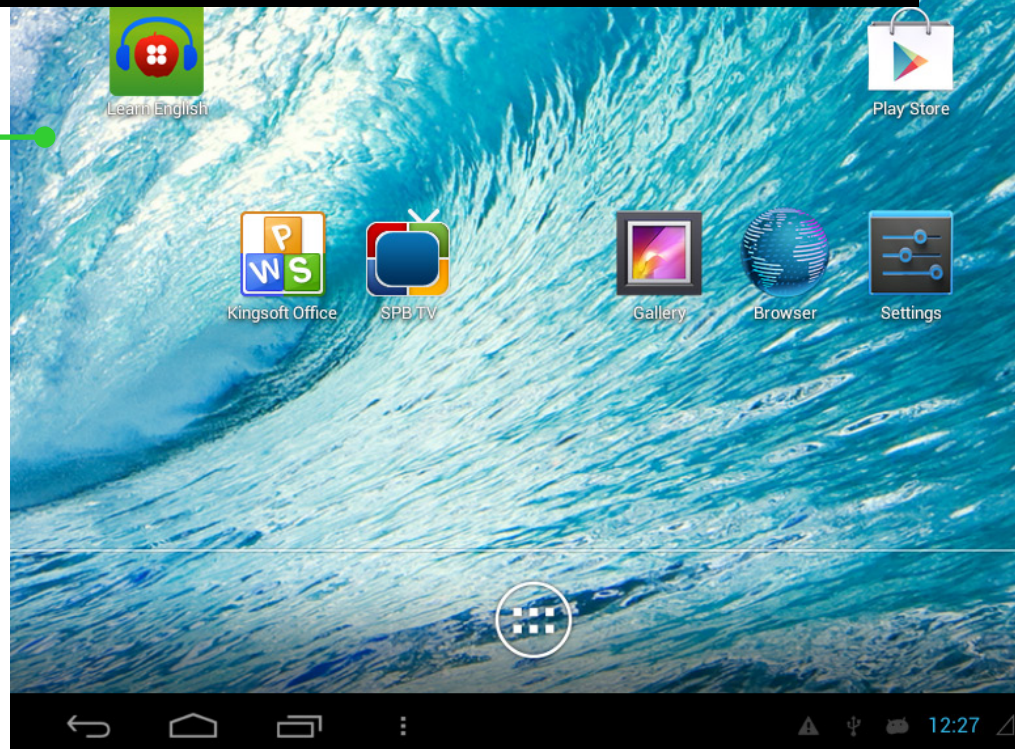

FINGER GESTURES

Tap

Short soft touch on an item (e.g. file, application, folder or menu item) opens it.




Press and Hold

This gesture calls context menu with available options for an item. While you are at Home Screen, it allows you to move an item.



Slide

Slide means move finger across the screen vertically or horizontally.

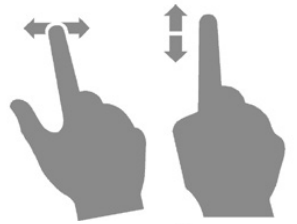

Drag

To drag an item, press and hold it until you reach final position.



Flick


Flicking is similar to sliding, but you need to move your finger more rapidly. It's used for scrolling through lists.

Pinch

In particular applications (e.g. *Maps*) to scale an image, you can 'pinch' the screen: move to zoom out or spread to zoom in with two fingers.




EXTENDED HOME SCREEN

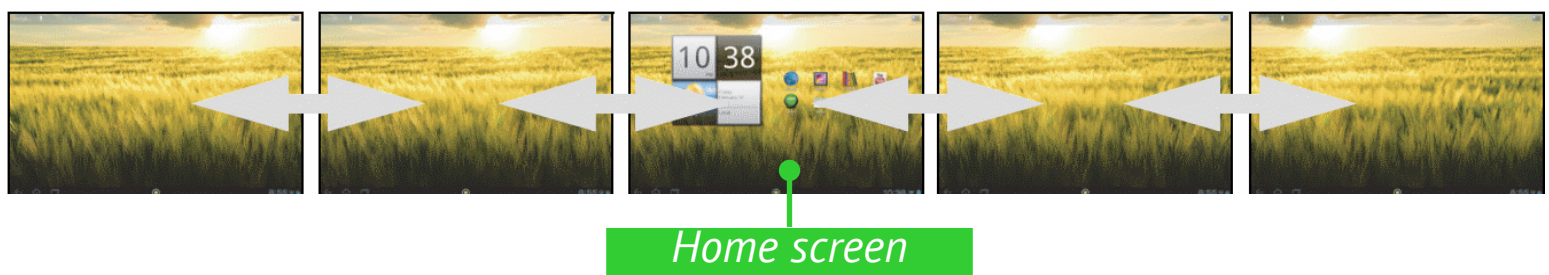

The Home screen consists of 5 desktops. To scroll the Home screen, move your finger across the screen or tip the counter icon in the left or right corner of the screen.


USING THE ON-SCREEN KEYBOARD

To access the on-screen keyboard, touch any textbox. Enter your text by touching the keys of the on-screen keyboard.

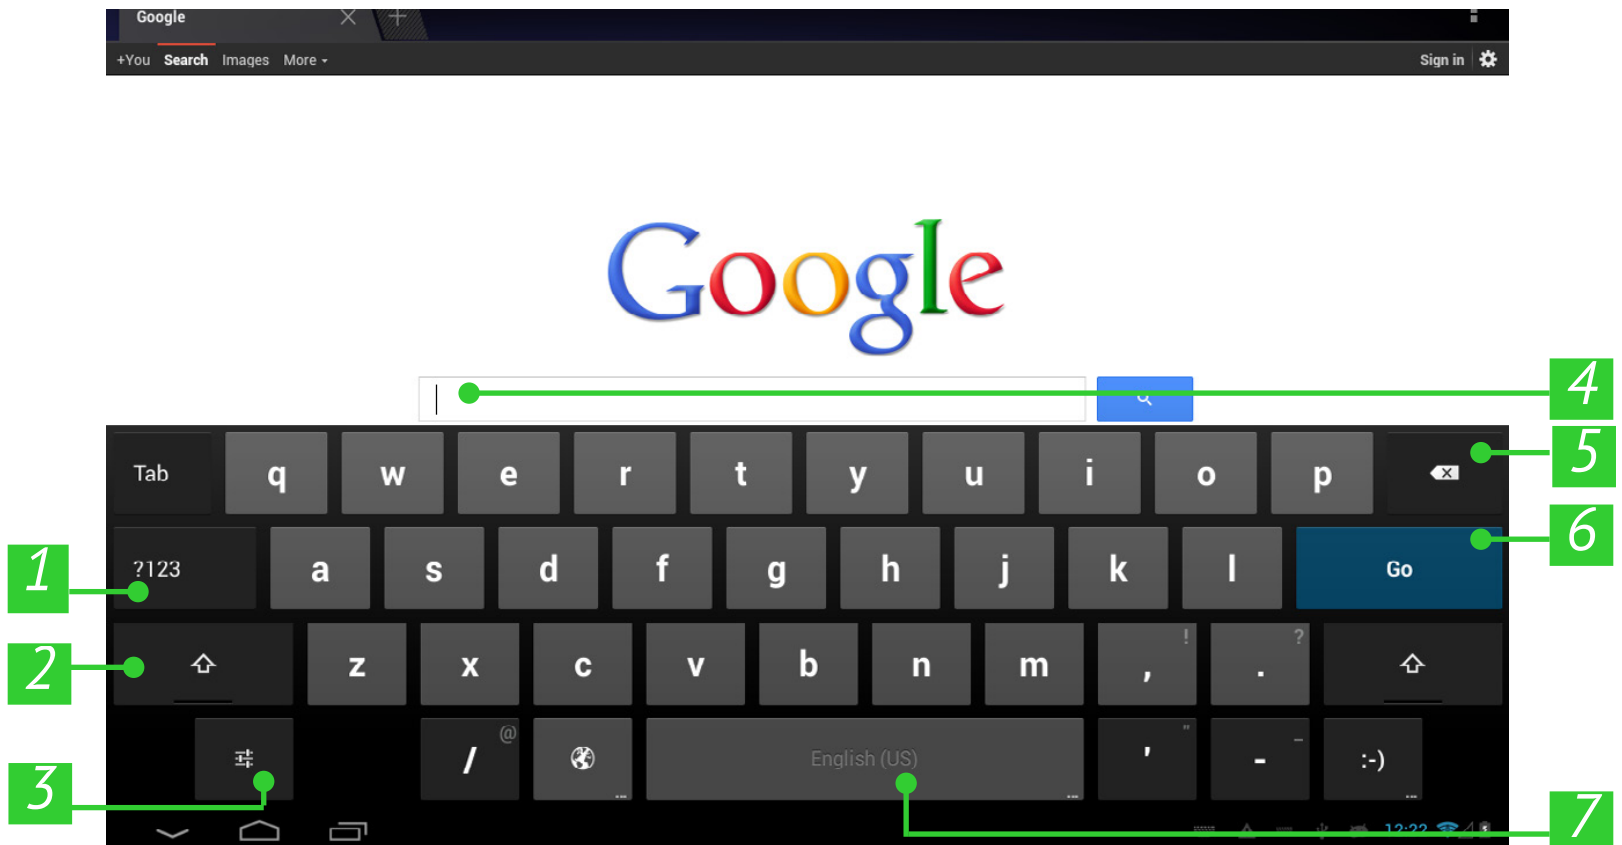

1. Switches to symbol mode;
2. Switches between upper and lower case;
3. Settings and additional features;
4. Field for text typing;
5. Backspace – delete a previous sign;
6. Input text;
7. Continuous press changes input languages.

MENUS

Most applications have two types of menu: application/section menu and context one. Application/section menu is brought up by pressing **Menu** button . Context menu is called by continuous touch on a screen or item, depending on application.

NOTE Application/section menu is available not for all applications. In this case nothing happens when you press the  **Menu** button.

ESTABLISHING WI-FI


If you skipped Wi-Fi configuration during the initial setup, you can configure it later.

1. Go to *Settings > Wireless & networks*. Check Wi-Fi checkbox
2. The list of available networks will be displayed.
3. The Device automatically detects security type, and if there's no need to specify additional data (e.g. pre-shared key), connection would be established.
4. Otherwise, you need to specify password and other security settings (if required) manually.

You can read about advanced network configuration in the *Wi-Fi Connection* chapter of the current User Manual.

INSERTING MICRO SD CARD

The Device already has 16 GB of internal storage, but you can extend it up to 2 TB by using micro SD card.

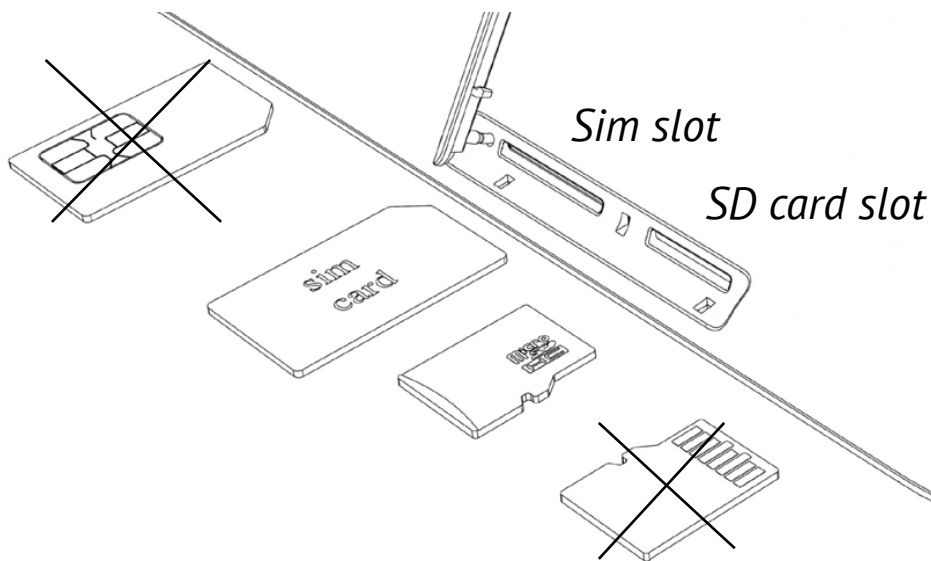

Insert it to the slot, like it shown on a figure, and slightly push until card will be fixed.

To eject the card, slightly press on its edge until it will be unfixed, and pull it to get.

ATTENTION! Before ejecting microSD card either turn the Device off or unmount it: go to *Settings > Storage settings > Unmount SD card*. Otherwise the data stored on microSD card might be damaged.

MOBILE NETWORKS CONNECTION

The Device supports GSM and/or WCDMA mobile networks connection for Internet access.

ATTENTION! The Device utilizes some services, which don't ask user's permission for Internet access (for example, synchronization). Consult with your mobile operator about traffic rates.

At first, you need to install your network operator SIM-card, as it is shown on the figure, and restart device. In case if the card is protected with PIN-code, the Device will ask you to enter it from on-screen keyboard. PIN-code request settings can be changed in *Settings > Security > SIM card lock > Set up SIM card lock*. In this section you can set whether request or not PIN-code when you are unlocking the screen, also you can change the SIM-card PIN-code.

NOTE In case when Lock SIM card parameter is on, you will be asked for PIN every time when you're unlocking the screen.

Usually mobile network operators pre-configure connection settings (such as APN) on a SIM-card, so the Device will connect to the network automatically.

ATTENTION! If the Device is connected to Wi-Fi network, it will have higher priority for data transfer.

If you need to change connection configuration, go to *Settings > Wireless & networks > More > Mobile networks*.


- *Data connection* – turn mobile network connection on or off
- *Data roaming* – select whether use mobile network connection or not when you are out of your mobile operator coverage, for example, abroad
- *Preferred networks*
- *Network mode* – select the most suitable one for your mobile network or set to auto-detect
- *Access Point Name* – Internet access points configuration. If you need to set up one more point, open the section's menu by **Menu** hardware key press and set the parameters provided by your mobile operator
- *Network operators* – select network operator to connect to. Press *Select automatically* to connect to the default network.

After pressing *Select manually*, the Device will search for available mobile networks and you will be able to select one. For example, this feature could be useful when you are in roaming zone – you will be able to select operator with the lowest rates.

NOTE Consult your mobile network operator about roaming rates.

MANAGE DATA

Use *File Manager* to operate with files, stored in internal Device memory and external microSD card. To open *File Manager*, press on its icon in the list of applications.

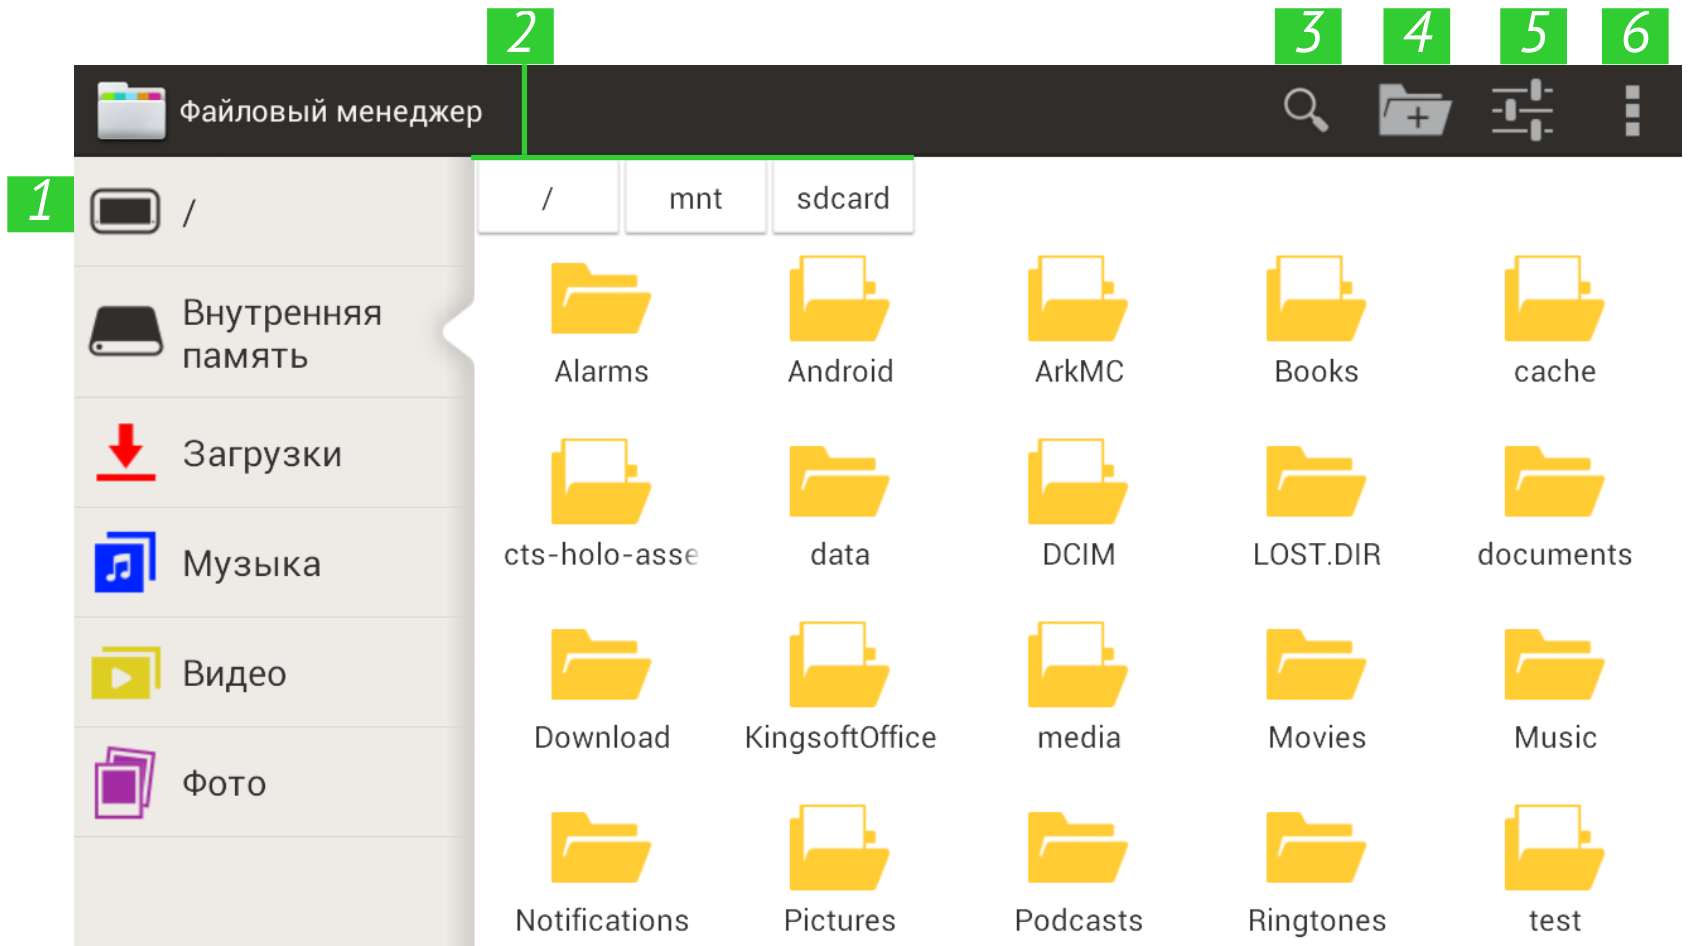

1. Root folder – returns to the highest level of file hierarchy;
2. Path to folder location;
3. Search – opens search textbox;
4. Create folder;
5. Select several files/folders;
6. File Manager settings.

Context menu, evoked by continuous press on element, allows moving, copying or deleting files.

APPLICATION LAUNCHING

The application can be launched by short press on the icon on the Homescreen or from the list of available applications. You can create a shortcut to an application at any desktop. Scroll Home Screen to the desktop you need, then open the application list.




Button for opening lists of applications and widgets

Touch and hold desired application icon until the desktop appears. After you release a finger, an icon remains on a desktop. To launch application tap on its icon.

Applications shortcuts

Widgets

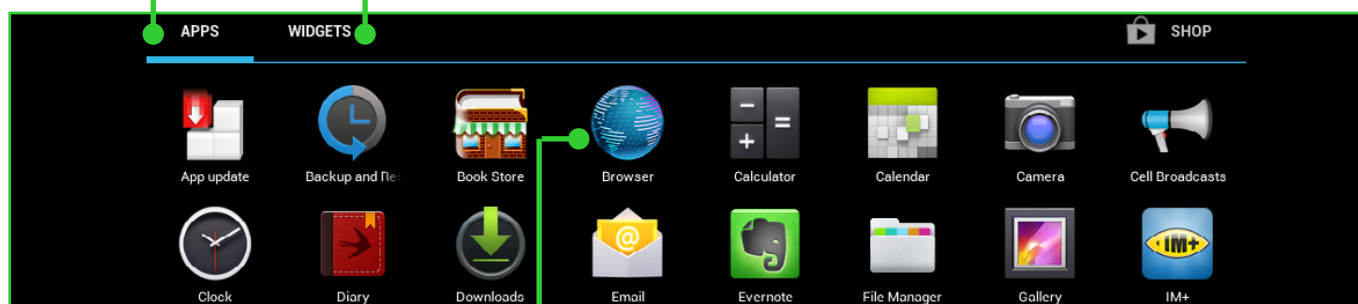

To place a shortcut on Homescreen, press and hold the one, selected in the list


CREATING FOLDERS ON THE HOME SCREEN

Desktop icons can be grouped into folders. To create a folder, tap and hold the icon and drag it to the icon which you want to merge with, and then release your finger.



You can add the icons of other programs to this folder in a similar way. To rename a folder, touch to its name and type the new name on the appeared keyboard.

To open an application, located in a folder, touch the icon of a folder and choose the application in the displayed list.

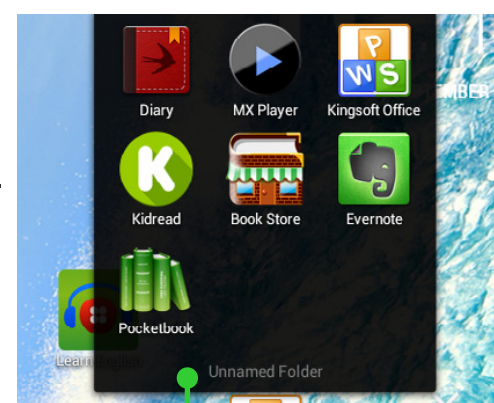

*A list of applications
in a folder*

APPLICATION REMOVING

After continuous touch on icon or widget *Sign of application removing* ✕ is activated. To delete element from the home screen or a folder, drag-and-drop it to this sign and release after it highlights in red.

Sign of application removing




LIST OF OPENED APPLICATIONS

Opened applications are displayed in the list of opened applications (button for invoking a list is located on the left bottom corner of the screen). You can close application:

1. Invoke the list of opened applications;
2. Press and hold the application, you need to close;
3. When the dialog window appears, press *Remove from list*.

Applications, launched by the system automatically, can be stopped in the *Settings > Apps > Running > Stop* (see more detailed information in *Information about Apps* section of the current User manual).

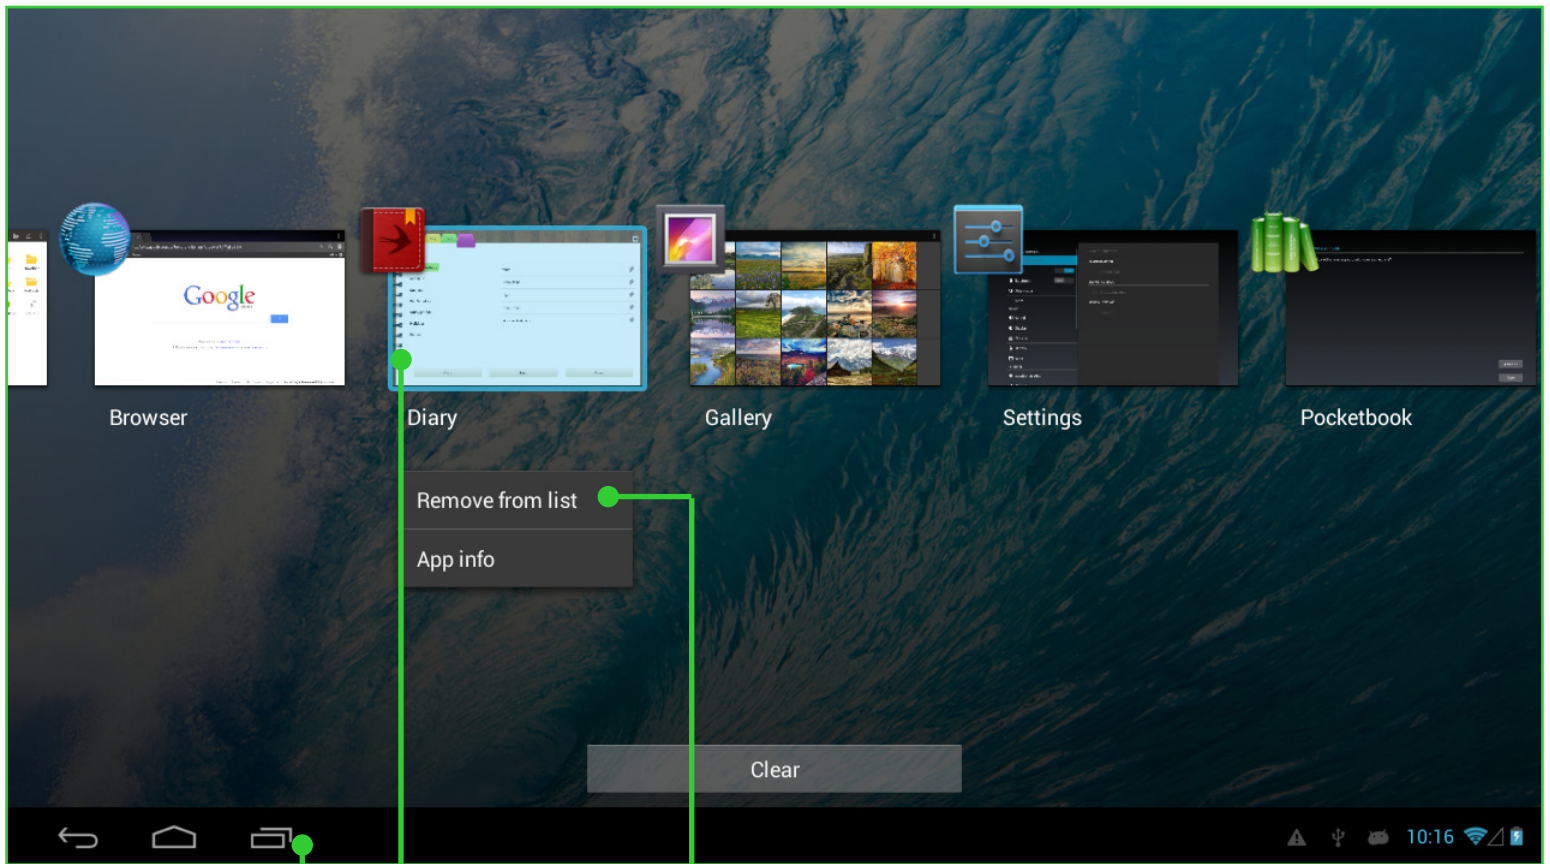





















3) Press 'Remove from list'

2) Press and hold on the application in the list

1) Button for invoking opened applications

PREINSTALLED APPLICATIONS

Browser	Supports functions for comfortable web-pages viewing	
Calculator	Simple Android calculator	
Calendar	Events calendar with Google synchronizing	
Camera	Standard Android (photo/video) camera application	
Clock	Clock with alarm and screen saving function	
People	List of contacts	
Downloads	Download tool for music, documents, video and other files	
Email	Email client supporting POP3, IMAP, Exchange	
File Manager	Standard file manager	
Gallery	Picture gallery supporting JPEG, PNG, BMP, GIF, video formats, and Google Picasa synchronization	
Search	Search by Google-in Internet or within content	
Settings	Set your options and preferences	
Music	Music player, supporting MP3, WMA, AAC	
Diary	Organize your study schedule and homework	
PocketBook	Reader from Pocketbook EPUB (DRM), PDF(DRM), FB2, TXT, HTML,RTF, CHM, DJVU	
Book Store	Book store application	
KidRead	Launcher for kids	
Play Store	Shop Google Play on the web	
Evernote	Remember Everything	
IM+	The most popular Internet Message client supporting several protocols	

LearnEnglish English learning app from British Council



SPB TV Popular TV channels streaming



Kingsoft Office Multilang View and edit popular office file formats



MX Player Video Player with advanced features



PBI PACKAGES SUPPORT

Sometimes the distribution of several programs is stored in one pbi package. To install these programs open the package and mark the programs you want to install.

Pre-installed pbi package is located in the *mnt/sdcard/PB System.pbi* folder. To install it **manually**, go to the *File manager* and launch *PB System.pbi* file. Sometimes the wizard **automatically** proposes to install the *pbi* package:

- after formatting the device (without deleting user data);
- after installing firmware.

After starting the wizard do the following:


- 1.** Check the applications you want to install and uncheck the applications you don't want to install.
- 2.** Press *Install*.
- 3.** After unpacking and installing selected applications press *Finish*.

All installed applications will appear on the Home screen. Some applications (*KidRead*, *PocketBook*) should be downloaded from the online store by means of the home screen icon, which redirects to the online store.

LISTEN TO THE MUSIC

Music Library

In Music Library you can see all the music, stored in the Device's memory.

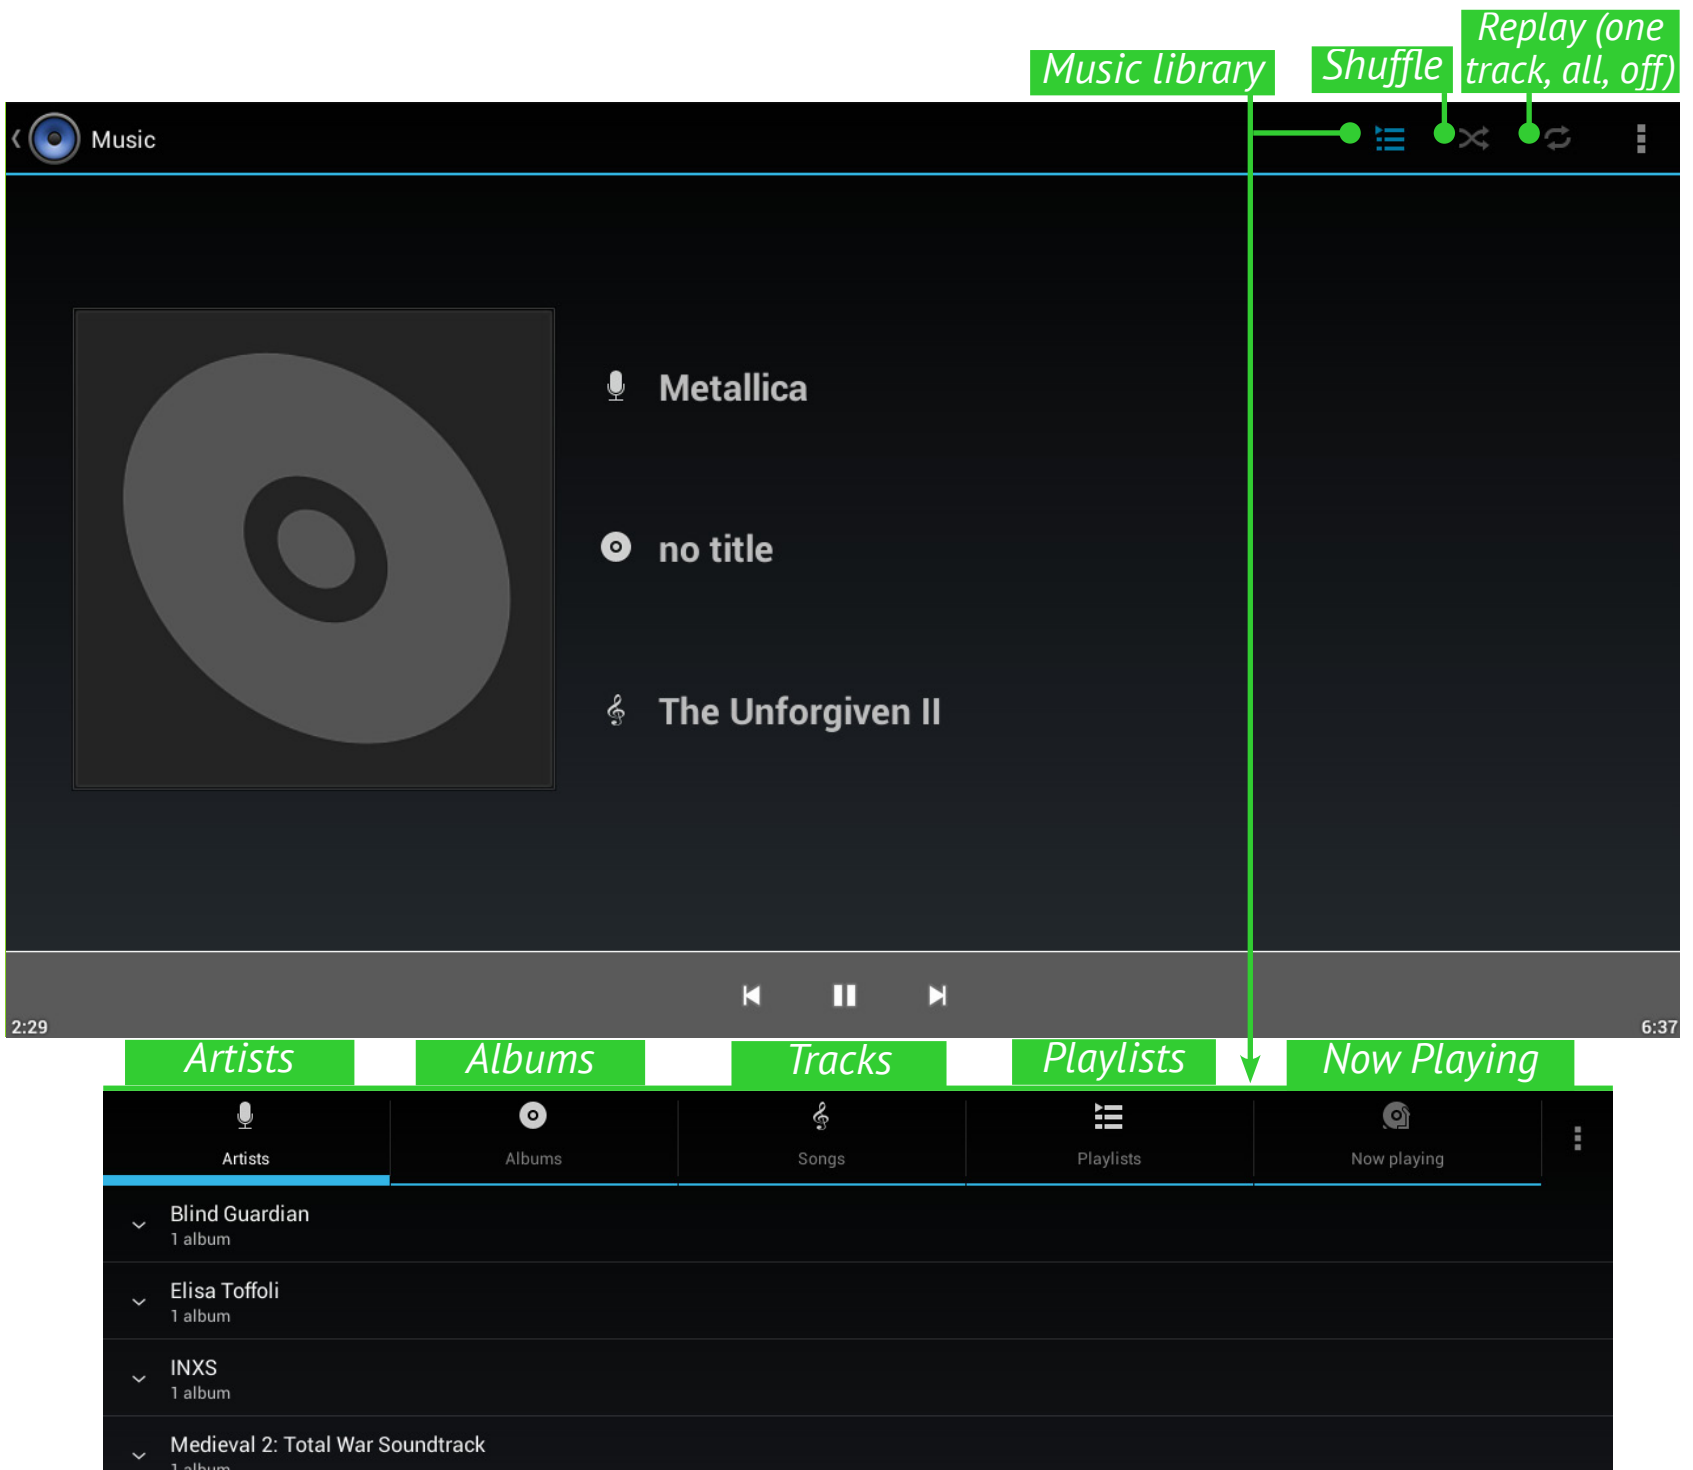


To create new playlist, bring up song's context menu, select *Add to playlist*, and select *New*.


Volume is controlled by **Volume +/-** hardware buttons on a side panel and by buttons on the bottom of the screen.

GALLERY

Gallery is an application for images and video management. To open an image in full screen, just touch it. To scroll the collection use sliding gesture. To zoom an image, use scaling gestures (pinch/spread).

From Gallery menu you can delete, crop, set as wallpaper or contact avatar, or rotate image.

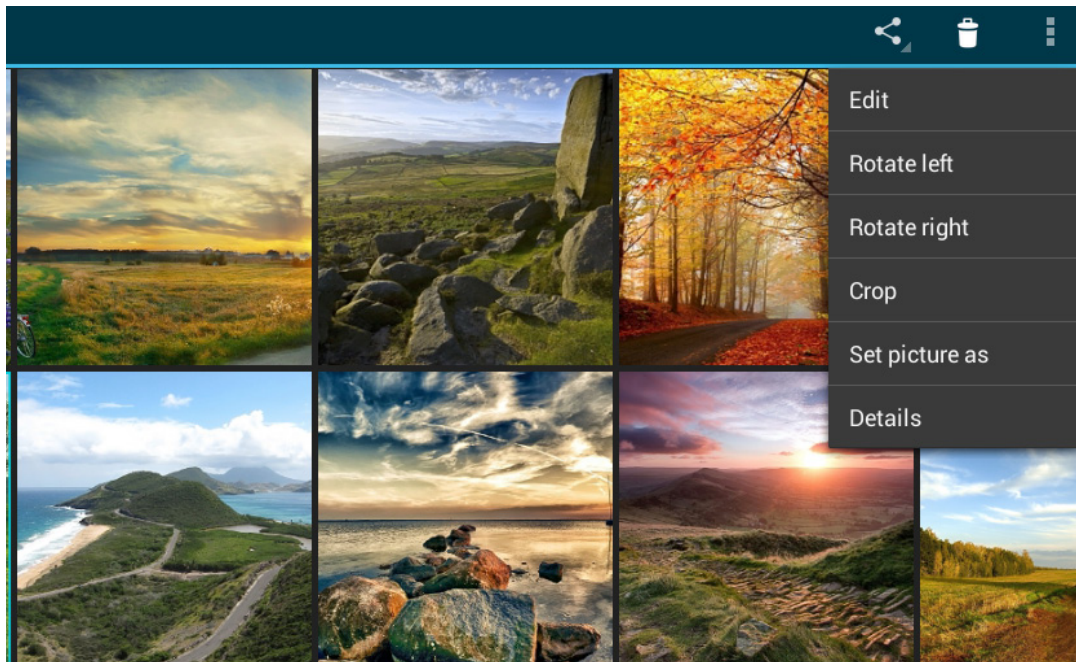

Application supports almost all video formats. You can view file information in the application menu .


MX PLAYER

MX Player is an application for viewing video. Control panel is presented below:




CAMERA

Photo and Video Modes

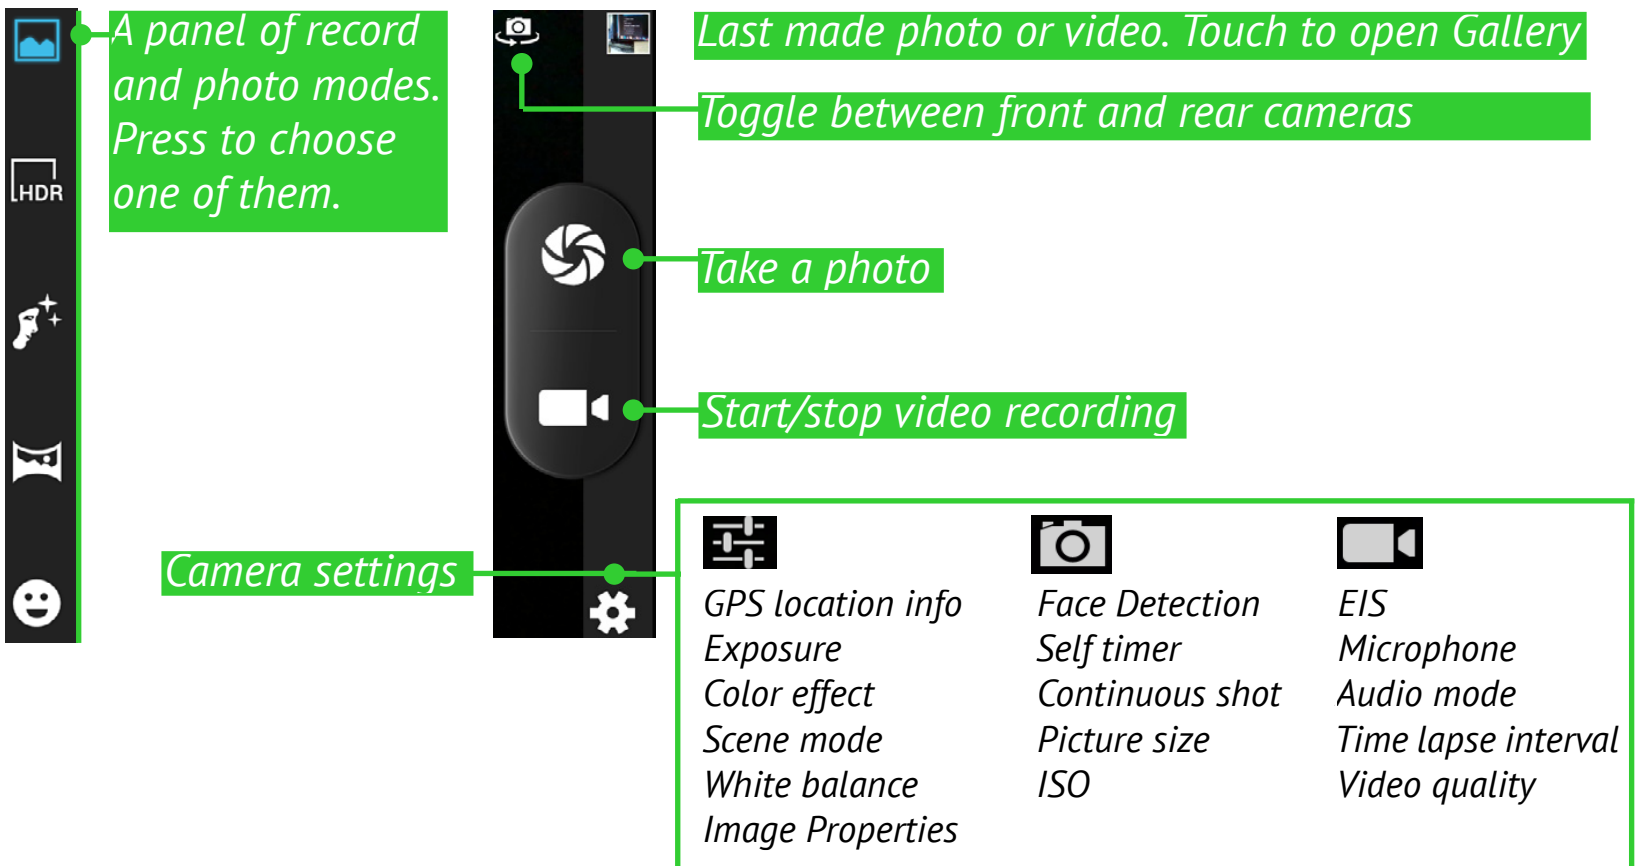

BROWSER

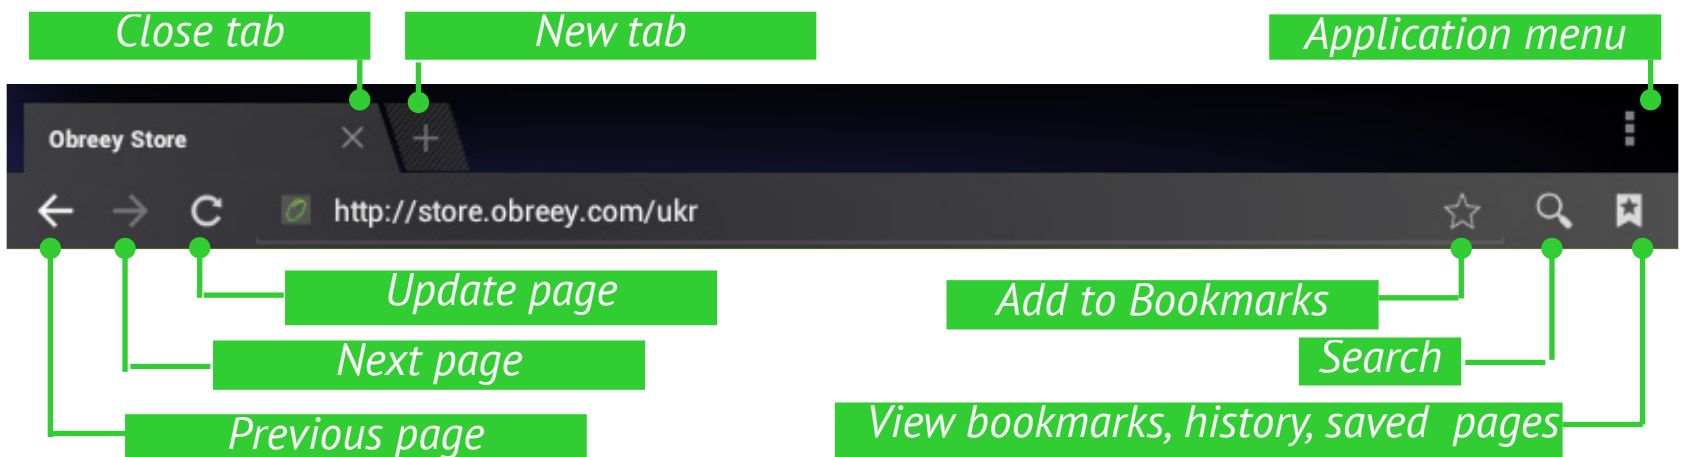

Using *Application menu* you can perform the following operations:

- *Stop/Update;*
- *New tab;*
- *New incognito tab*
- *Share page;*

- *Find on page;*
 - *Request desktop site;*
 - *Save for offline reading;*
 - *Page info;*
- Settings.* ●

General

Privacy & security

Accessibility

Advanced

Bandwidth management

Labs

EMAIL

Setting Up the Account

1. At the first run you will be suggested to enter from on-screen keyboard your account information: email address and password.
2. If application isn't able to detect incoming and outgoing server settings automatically, you would need to specify these settings manually (they should be given by your email service provider).
3. Next step is to specify account name, as it will be stored in the Device (e.g. *Personal Mail* or *Office Mail*) and your name, as it will be displayed in *From* field of your composed messages.
4. To add an account, select corresponding item in application menu.


Accounts list, combined inbox, starred messages and drafts will be displayed in *Accounts* section.


Inbox

Using context menu, you can do the following with message: *Open, Delete, Forward, Reply, Mark as read.*

Settings

In this chapter you will learn how to configure the Device for the most comfortable usage and make it truly yours. You can open settings in several ways:

- press the menu button  in the bottom of the screen;
- open all available applications (button on the application panel) and select the *System settings* icon;
- press the *Settings* icon on the device display.

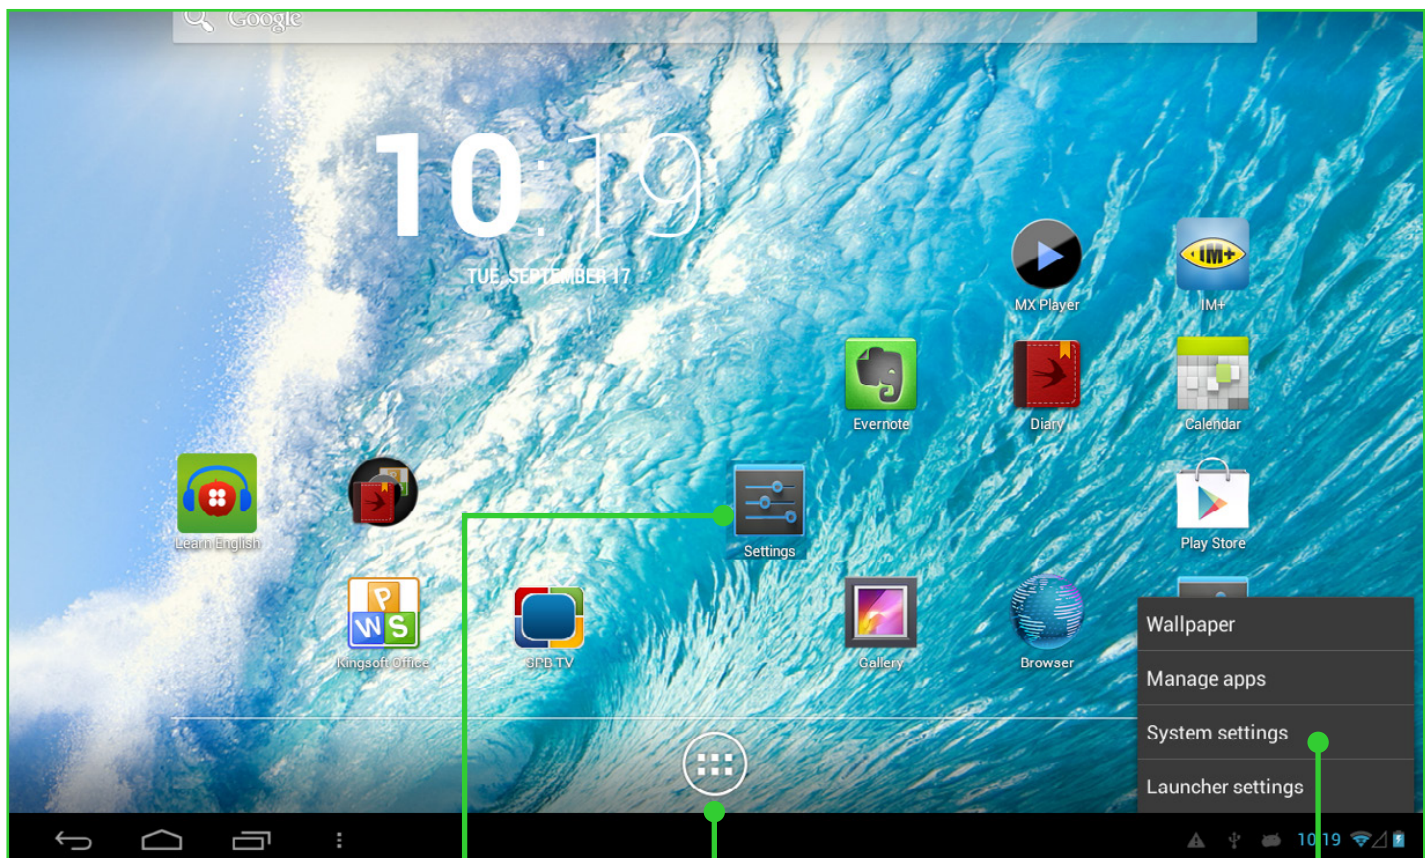


Button for invoking Settings menu


Settings icon

Button for invoking list of applications and widgets

Press System settings

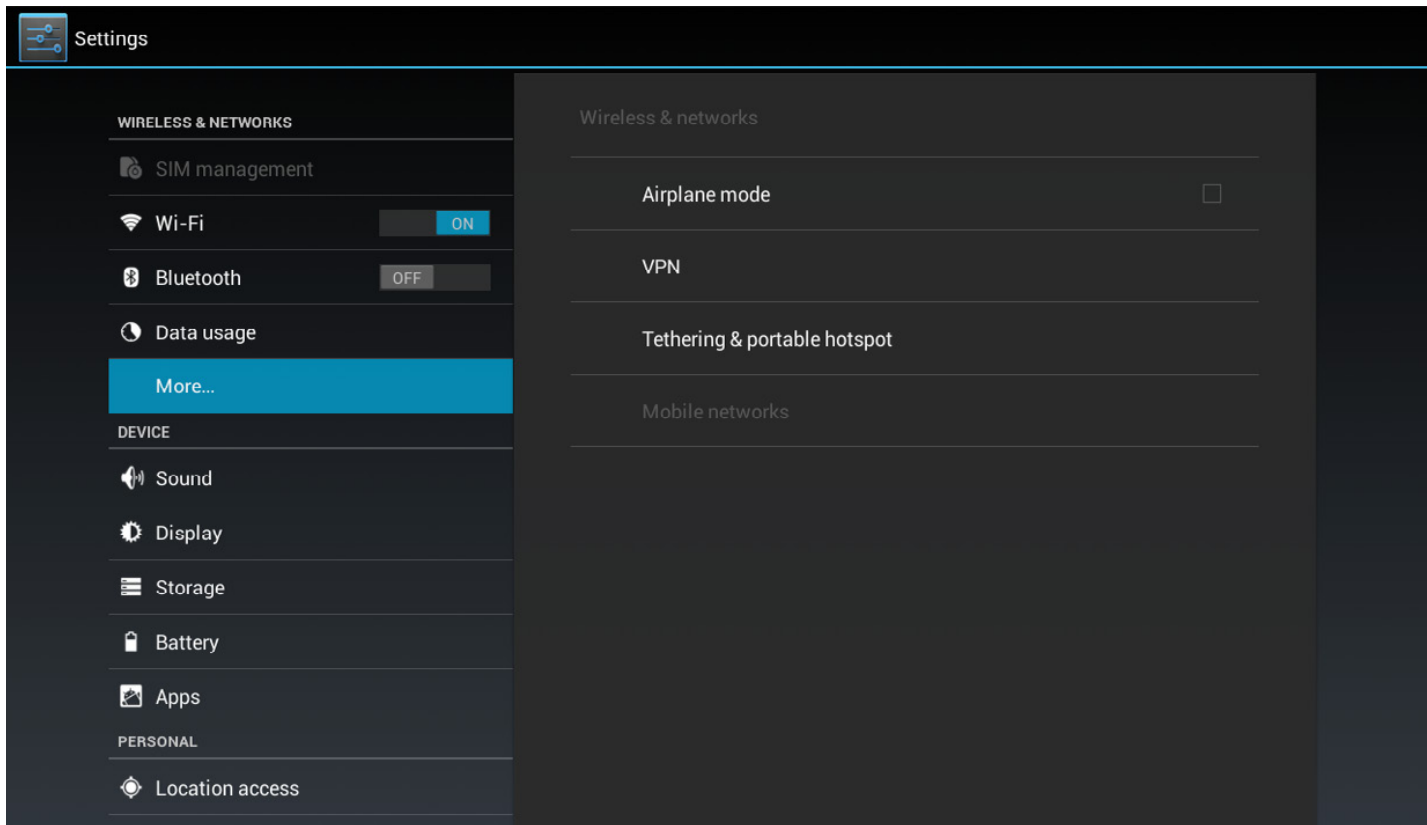

Slide the list of settings upward to view all settings.

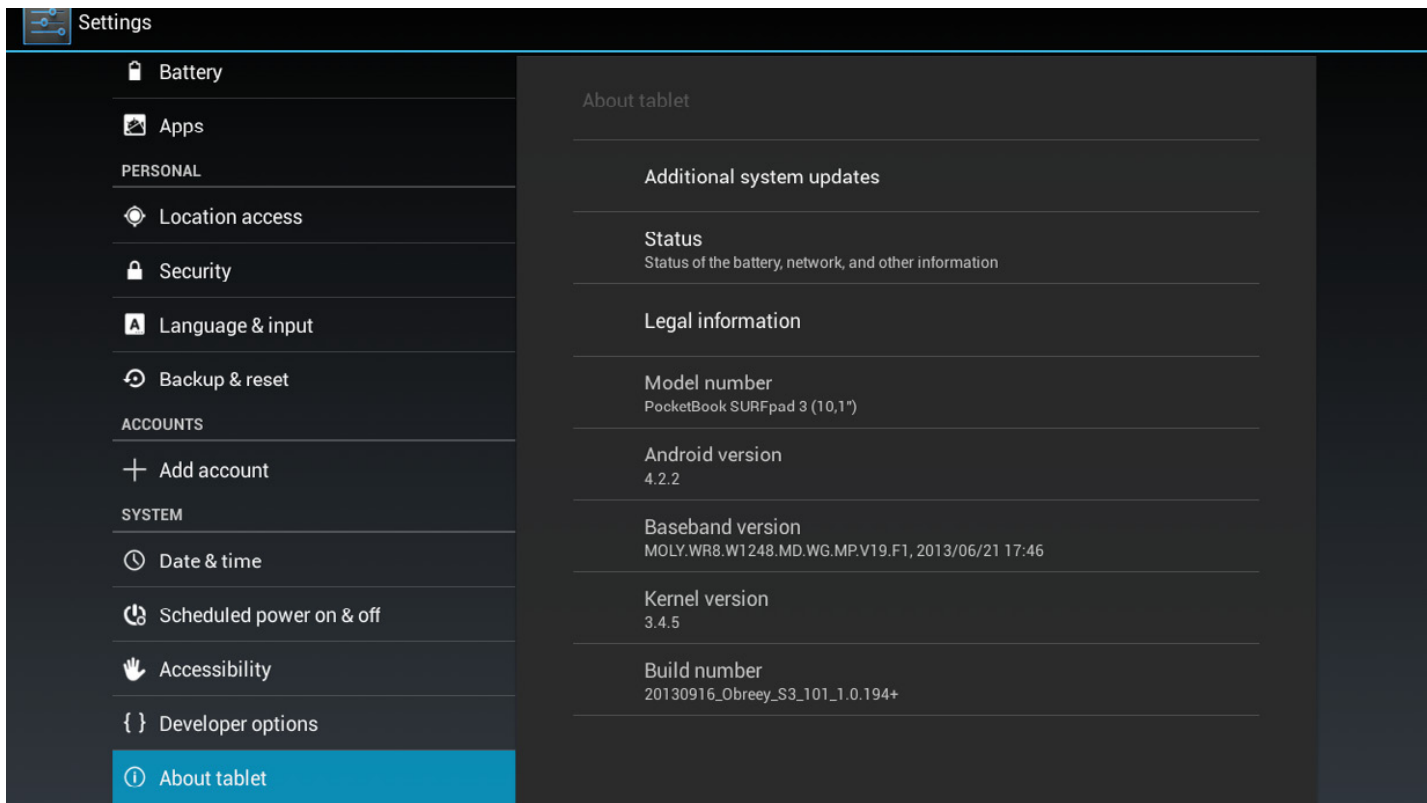


LANGUAGE & INPUT

To change interface language, go to *Language and input* > *Language* section and select the one you need.

Personal dictionary section stores words, added by user for auto-completion.

In *Android keyboard* section you can turn on/off the following settings:


- *Auto-capitalization*;
- *Sound on key-press*;
- *Show settings key* – define, whether show settings key on a keyboard or not;
- *Auto-correction* – spacebar and punctuation correct mistyped words automatically;
- *Show correction suggestions*;
- *Advanced settings*.

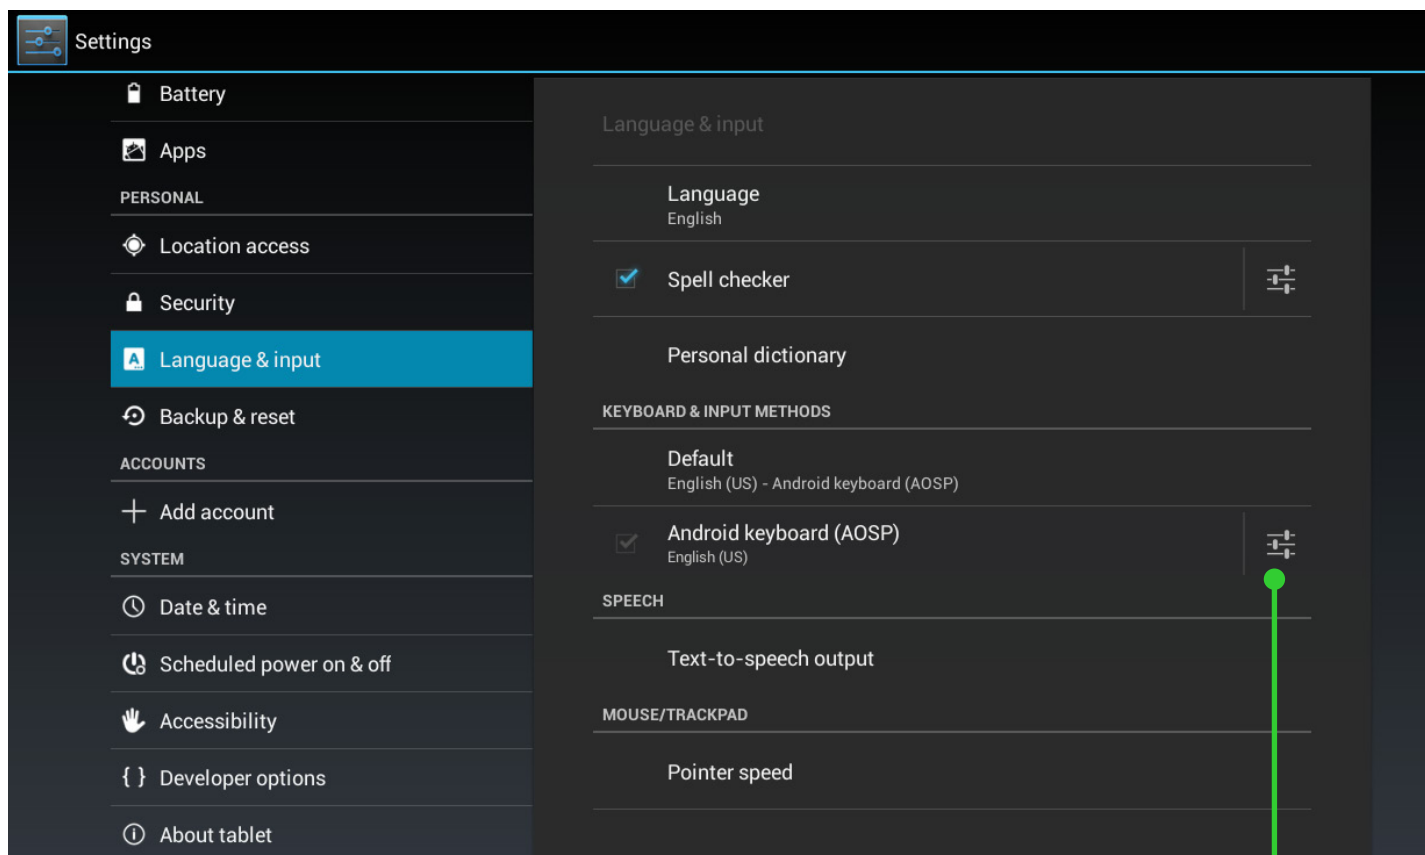

Open submenu

SOUND SETTINGS

Multimedia volume is adjusted with volume control buttons.

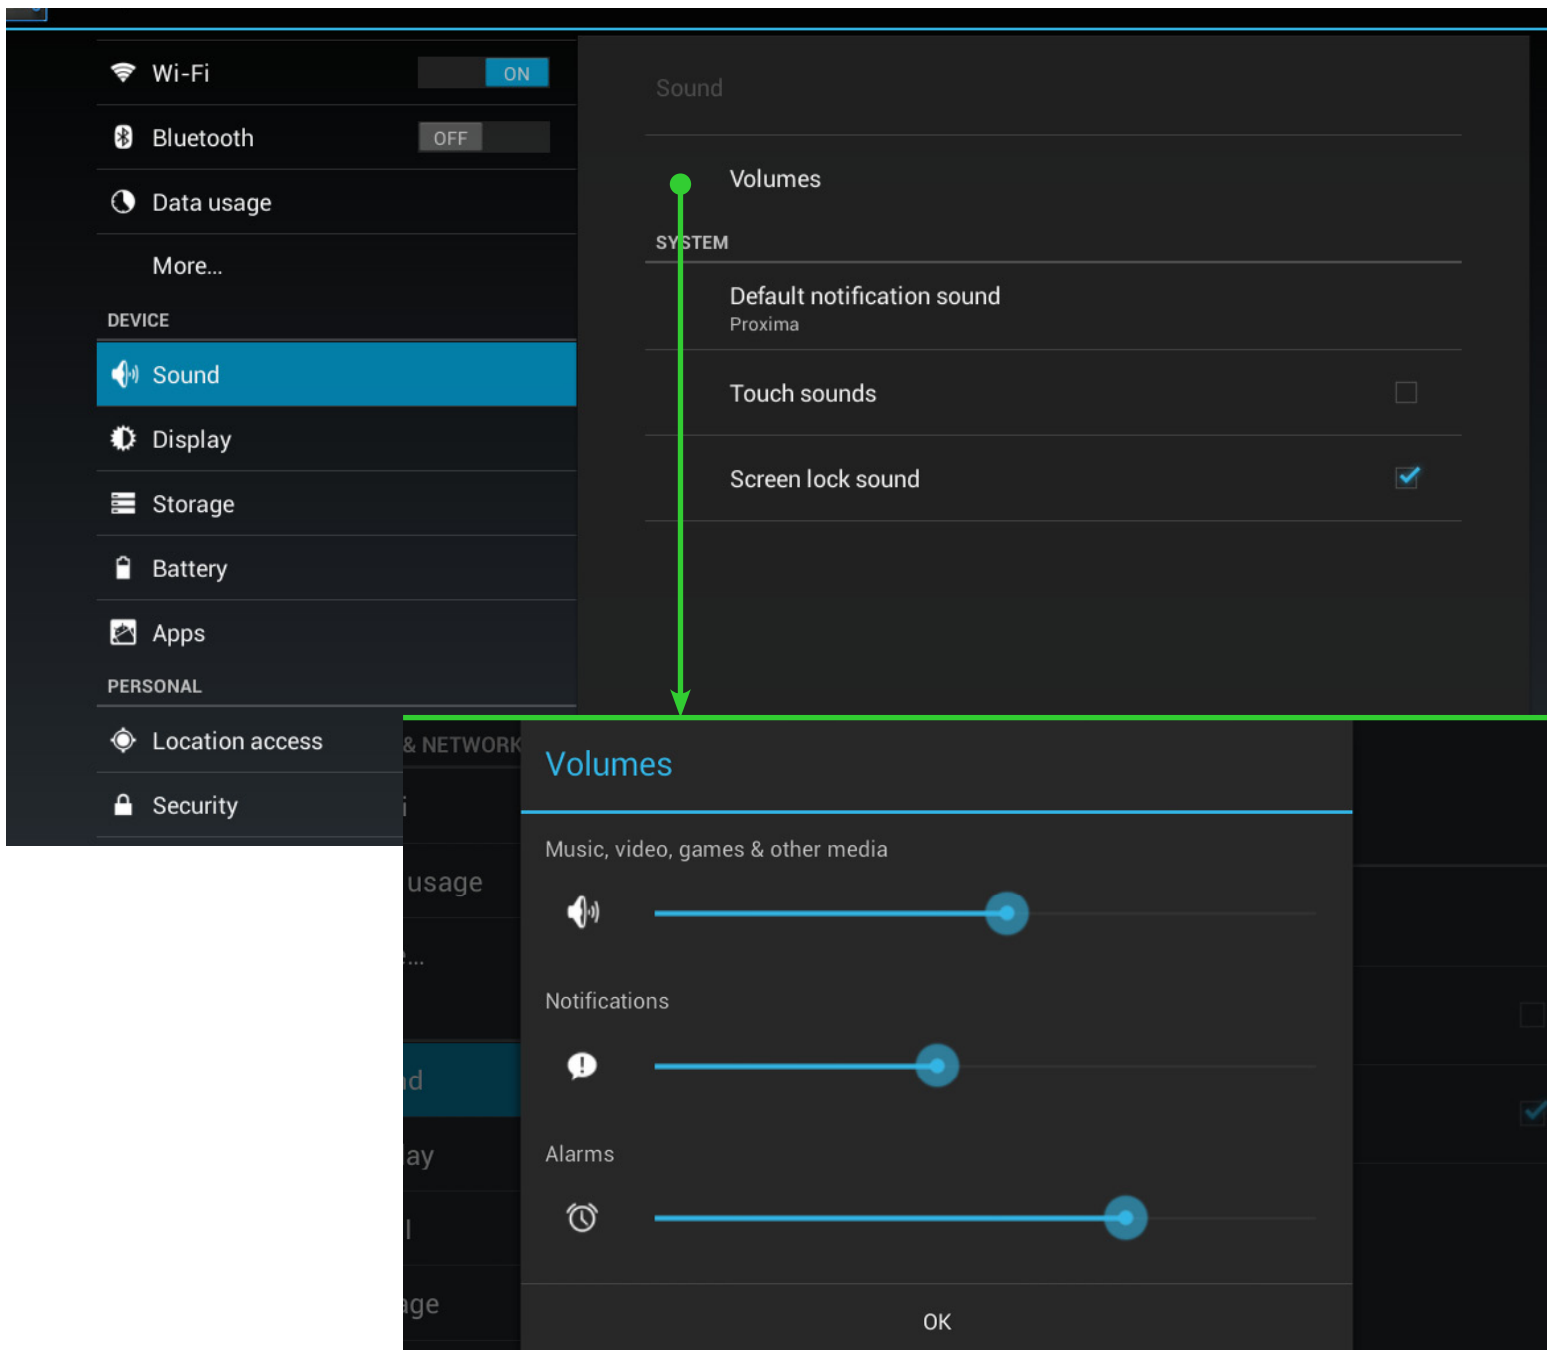


Under section *Settings* > *Device* > *Sound* you can adjust multimedia and alarm volume separately, and also set keypress, screen touch and screen lock sounds.

DISPLAY SETTINGS


Under section *Settings* > *Device* > *Display* you can set next parameters:

- *Brightness*;
- *Wallpaper*;
- Auto-rotate screen;
- *Daydream*: clock, colors, photo frame or photo table
- *Font size*
- *Sleep* – set the delay before the screen goes down to save battery charge;
- *Wireless display*.

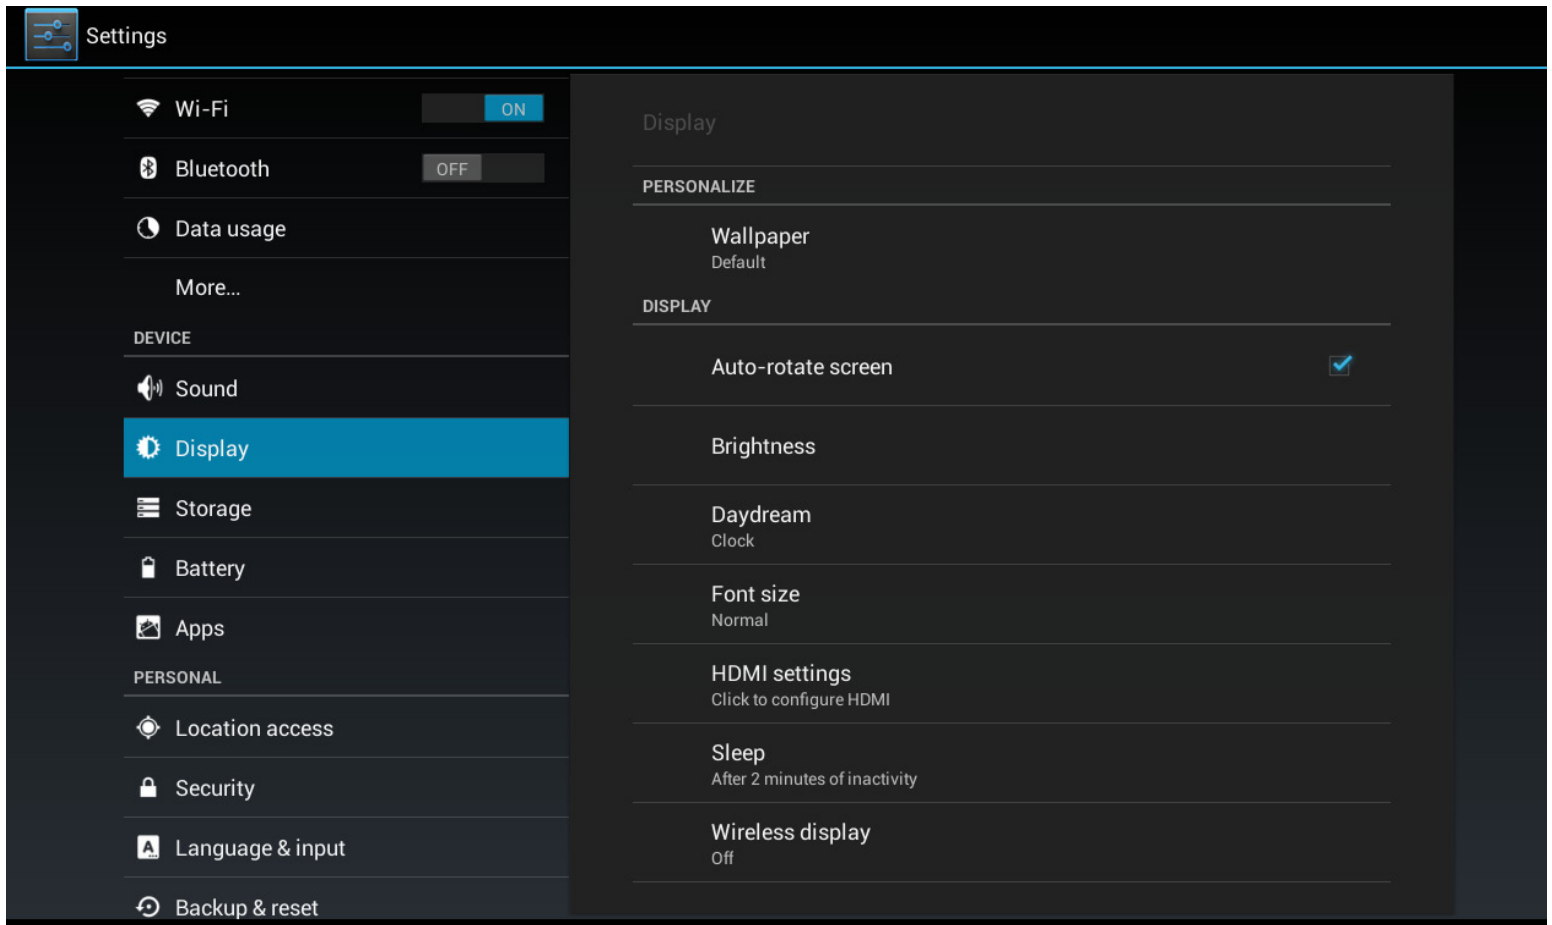

STORAGE

Storage section displays information about the Device storage (internal and external SD-card memory): total, occupied, available space. In this section you can also clean internal or external memory.

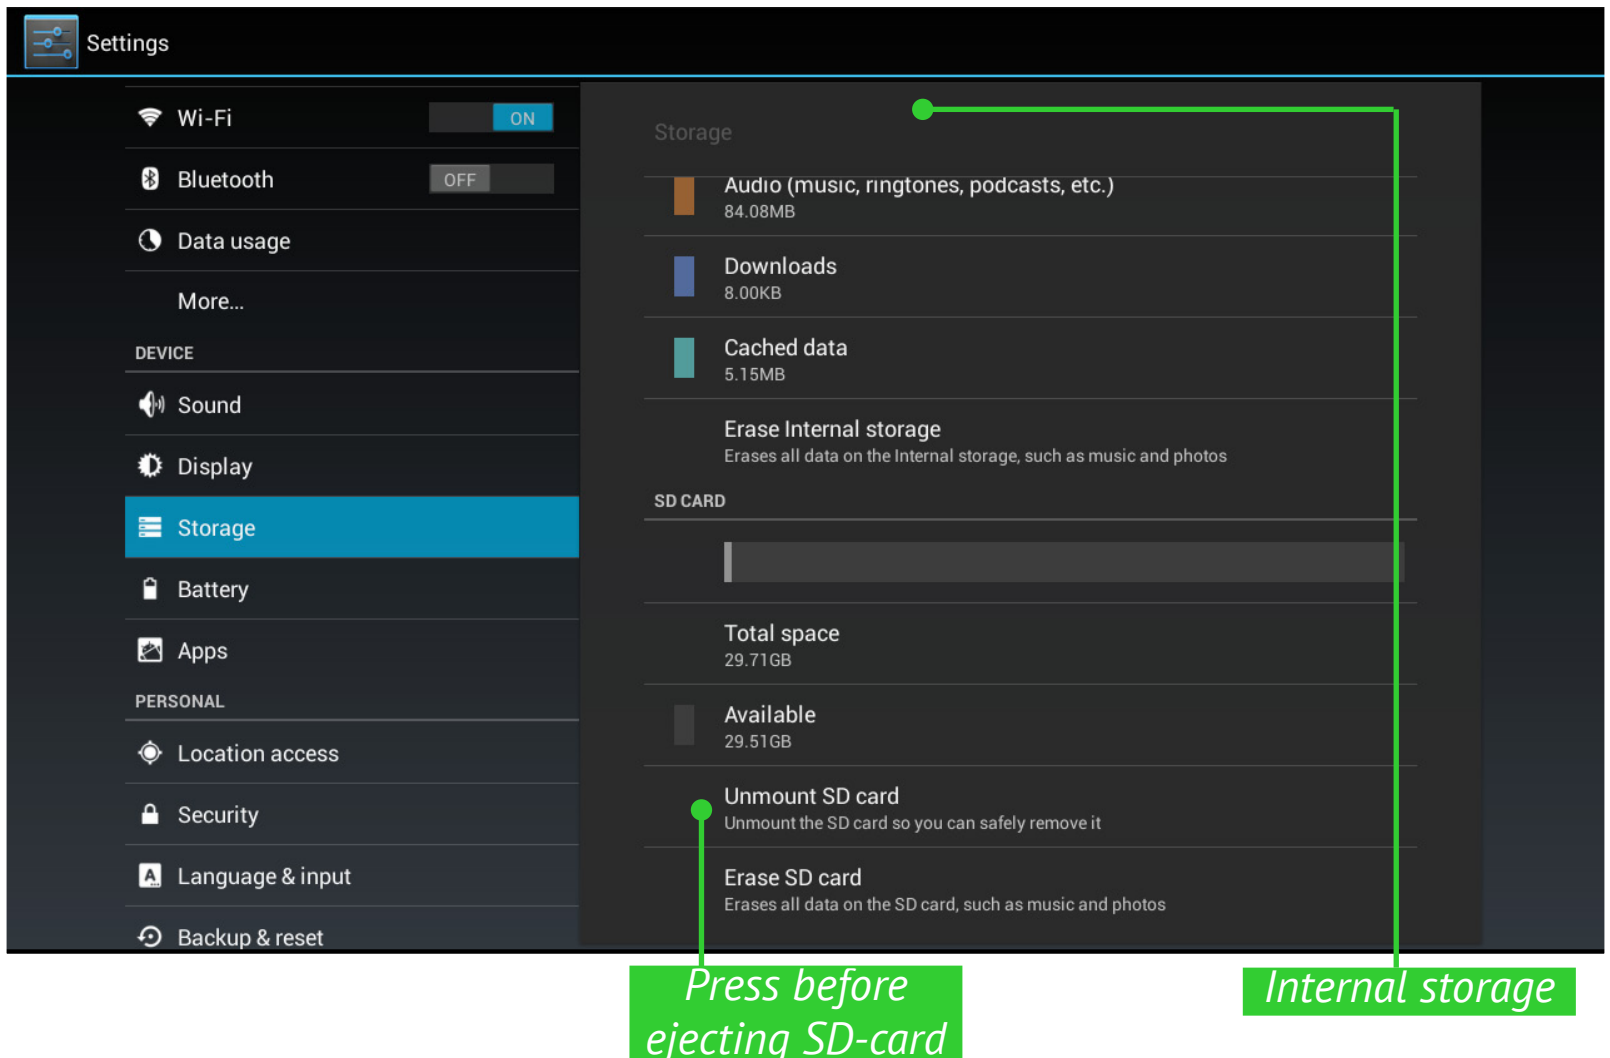

CONNECTING DEVICES TO YOUR TABLET

USB devices are supported through the USB port, such as a keyboard, mouse, game controller, digital camera, or storage device. If you want external devices to be identified automatically, check *Enable media scanning on SD* in *Settings > Storage* (as it is shown on the picture above).

UNMOUNTING EXTERNAL MEMORY AND DEVICES

Before ejecting External memory or USB host press *Settings > Storage > SD card/USB host > Unmount shared storage*.

LOCATION ACCESS AND SECURITY

In these *Settings* items you can set:

- determining your location by network coordinates;
- detecting GPS satellites;
- different ways of screen locking and unlocking;
- owner info;
- encryption;
- administrators and passwords;
- storing accounts data.

DATE & TIME

In this chapter you can set date, time, time zone, time and date display format (12 or 24 hour) or check *Automatic* to determine time and date settings using wireless network data.

The image shows two screenshots from an Android phone's settings. The top screenshot shows the 'Date & time' settings page. A green box labeled 'Set date and time' points to the 'Set date' and 'Set time' options. Another green box labeled 'Marks for auto time sync confirmation' points to the 'Automatic date & time' and 'Automatic time zone' options. The bottom screenshot shows a date picker for Tuesday, September 17, 2013. A green box labeled 'Touch numbers to choose date' points to the date '17' in the calendar grid.

Set date and time

Marks for auto time sync confirmation

Touch numbers to choose date

PERSONAL

- Location access
- Security
- Language & input
- Backup & reset

ACCOUNTS

- + Add account

SYSTEM

- Date & time**
- Scheduled power on & off

Automatic date & time
Use network provided time

Automatic time zone
Use network-provided time zone

Set date
9/17/2013

Set time
10:21 AM

Select time zone
GMT+00:00, GMT

Use 24-hour format
1:00 PM

Choose date format

Tue, Sep 17, 2013



September 2013

S	M	T	W	T	F	S
36	1	2	3	4	5	6
37	8	9	10	11	12	13
38	15	16	17	18	19	20
39	22	23	24	25	26	27
40	29	30	1	2	3	4
41	6	7	8	9	10	11

h & off Done

RESTORE YOUR TABLET TO FACTORY SETTINGS

Select *Settings* > *Backup & reset* > *Factory data reset* menu item, in opened window press *Reset tablet* and *Erase everything*. It will restore your tablet to the factory settings and erase all your personal information: downloaded applications, system settings, google account.

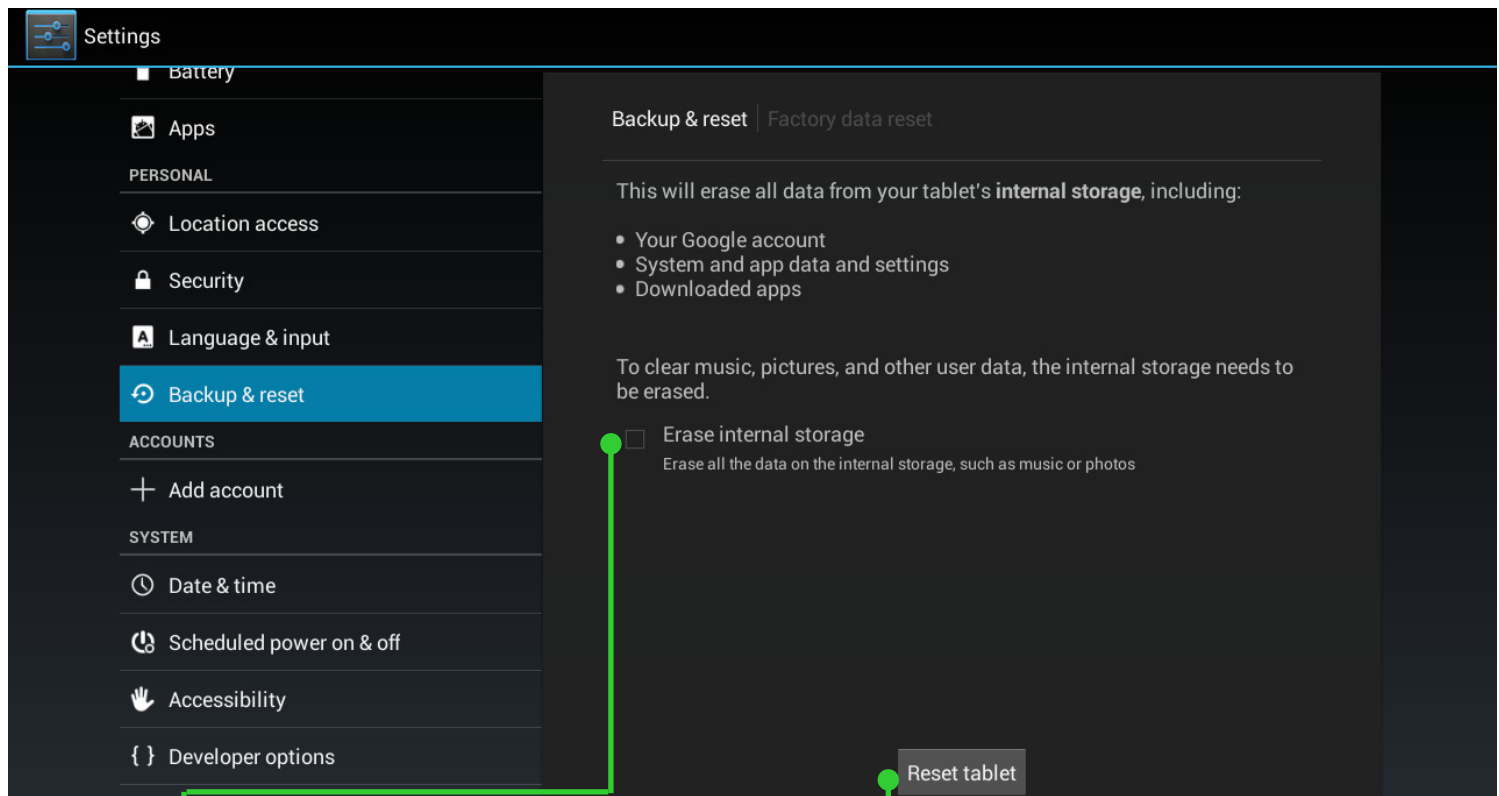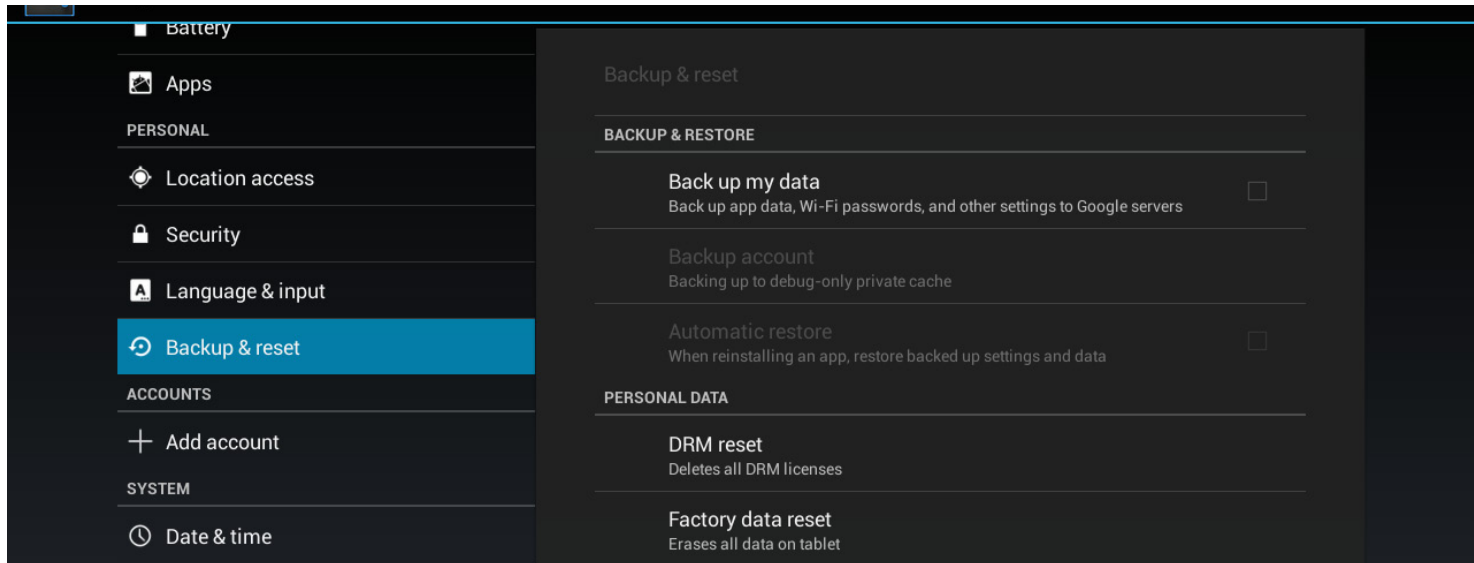

Clean SD card storage

Press to reset tablet

Another way to restore your tablet to factory settings:


- Press and hold **Volume +** button and switch the Device on by pressing power button

SETTINGS

- *Android system recovery* menu will appear. Now you can release **Volume +** button
- Select *wipe data/factory reset* using **Volume +/-** hardware keys and press **On/Off** key to confirm choice.
- Select yes – delete all user data and press **Menu**
- Under service menu select *reboot system now* and press **Menu**

BATTERY CHARGE STATE

It displays battery charge level (in percents), information whether the Device is charging via network or working from battery. In *Battery* section you can view info about applications, consuming the power.

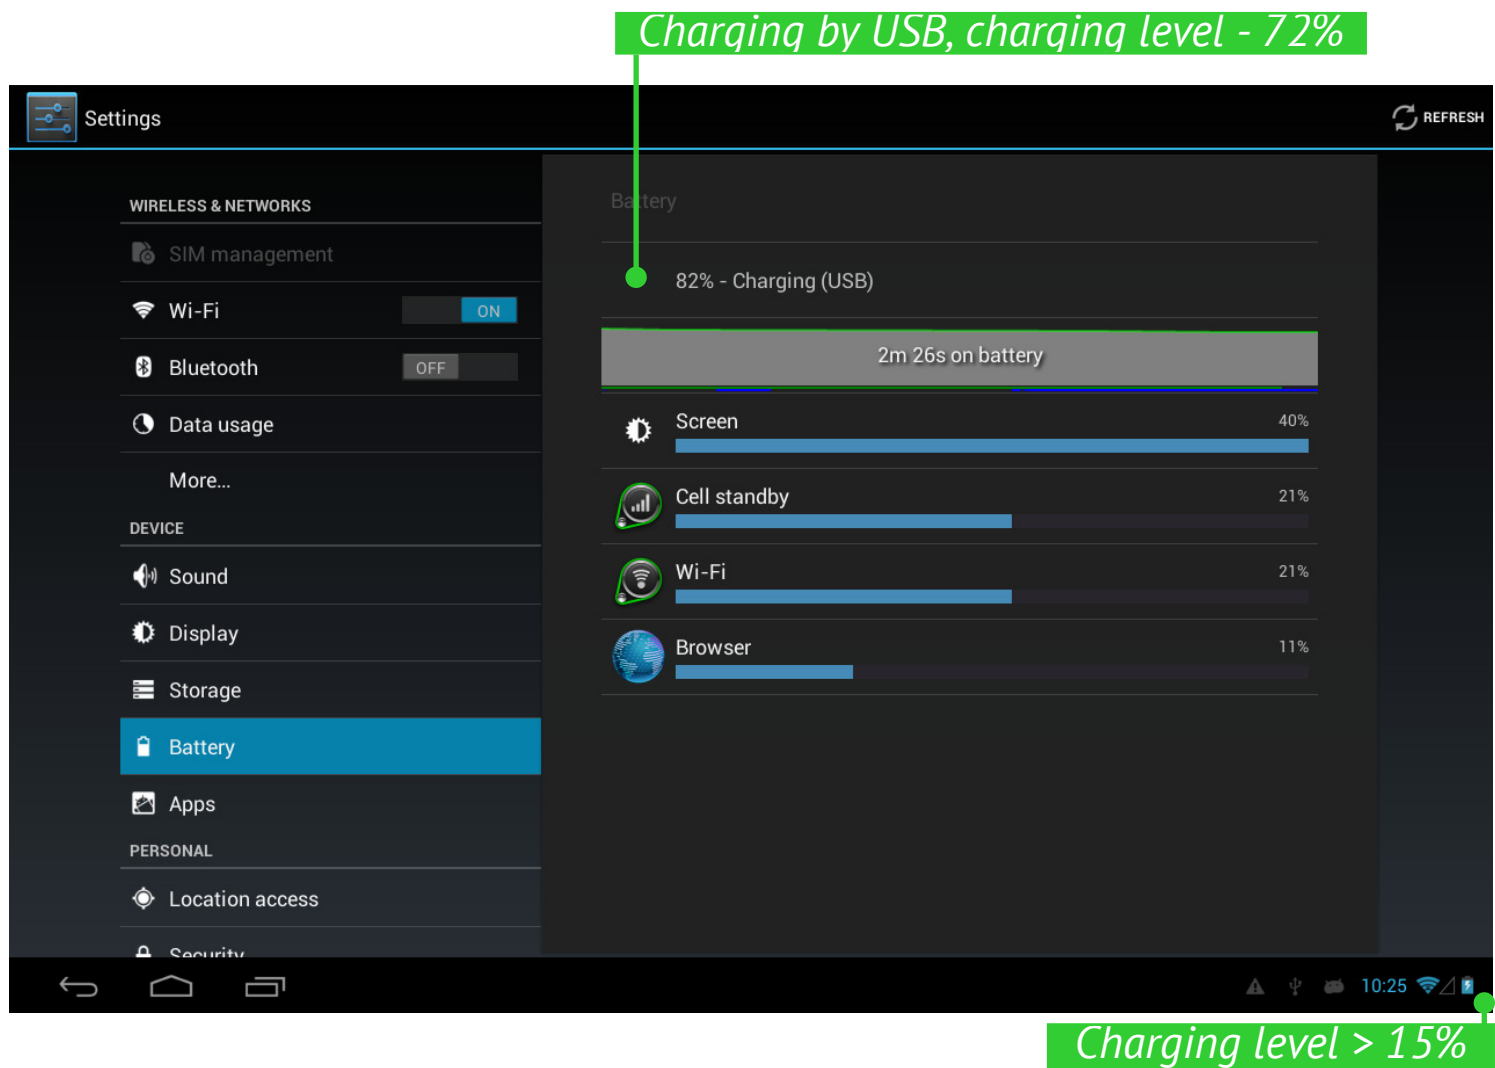


WI-FI CONNECTION

Connecting to Wi-Fi Network with Automatically Obtained IP-address


1. Go to *Settings > Wireless & networks* and slide the *Wi-Fi* switch to the *On* position. The device scans for available Wi-Fi networks and displays the names of those it finds.

2. Touch a network name to connect to it and type a password if necessary. Press *Connect*.

At this network tapping IP-address will be obtained automatically. You can view advanced network options, ticking *Show advanced options*.

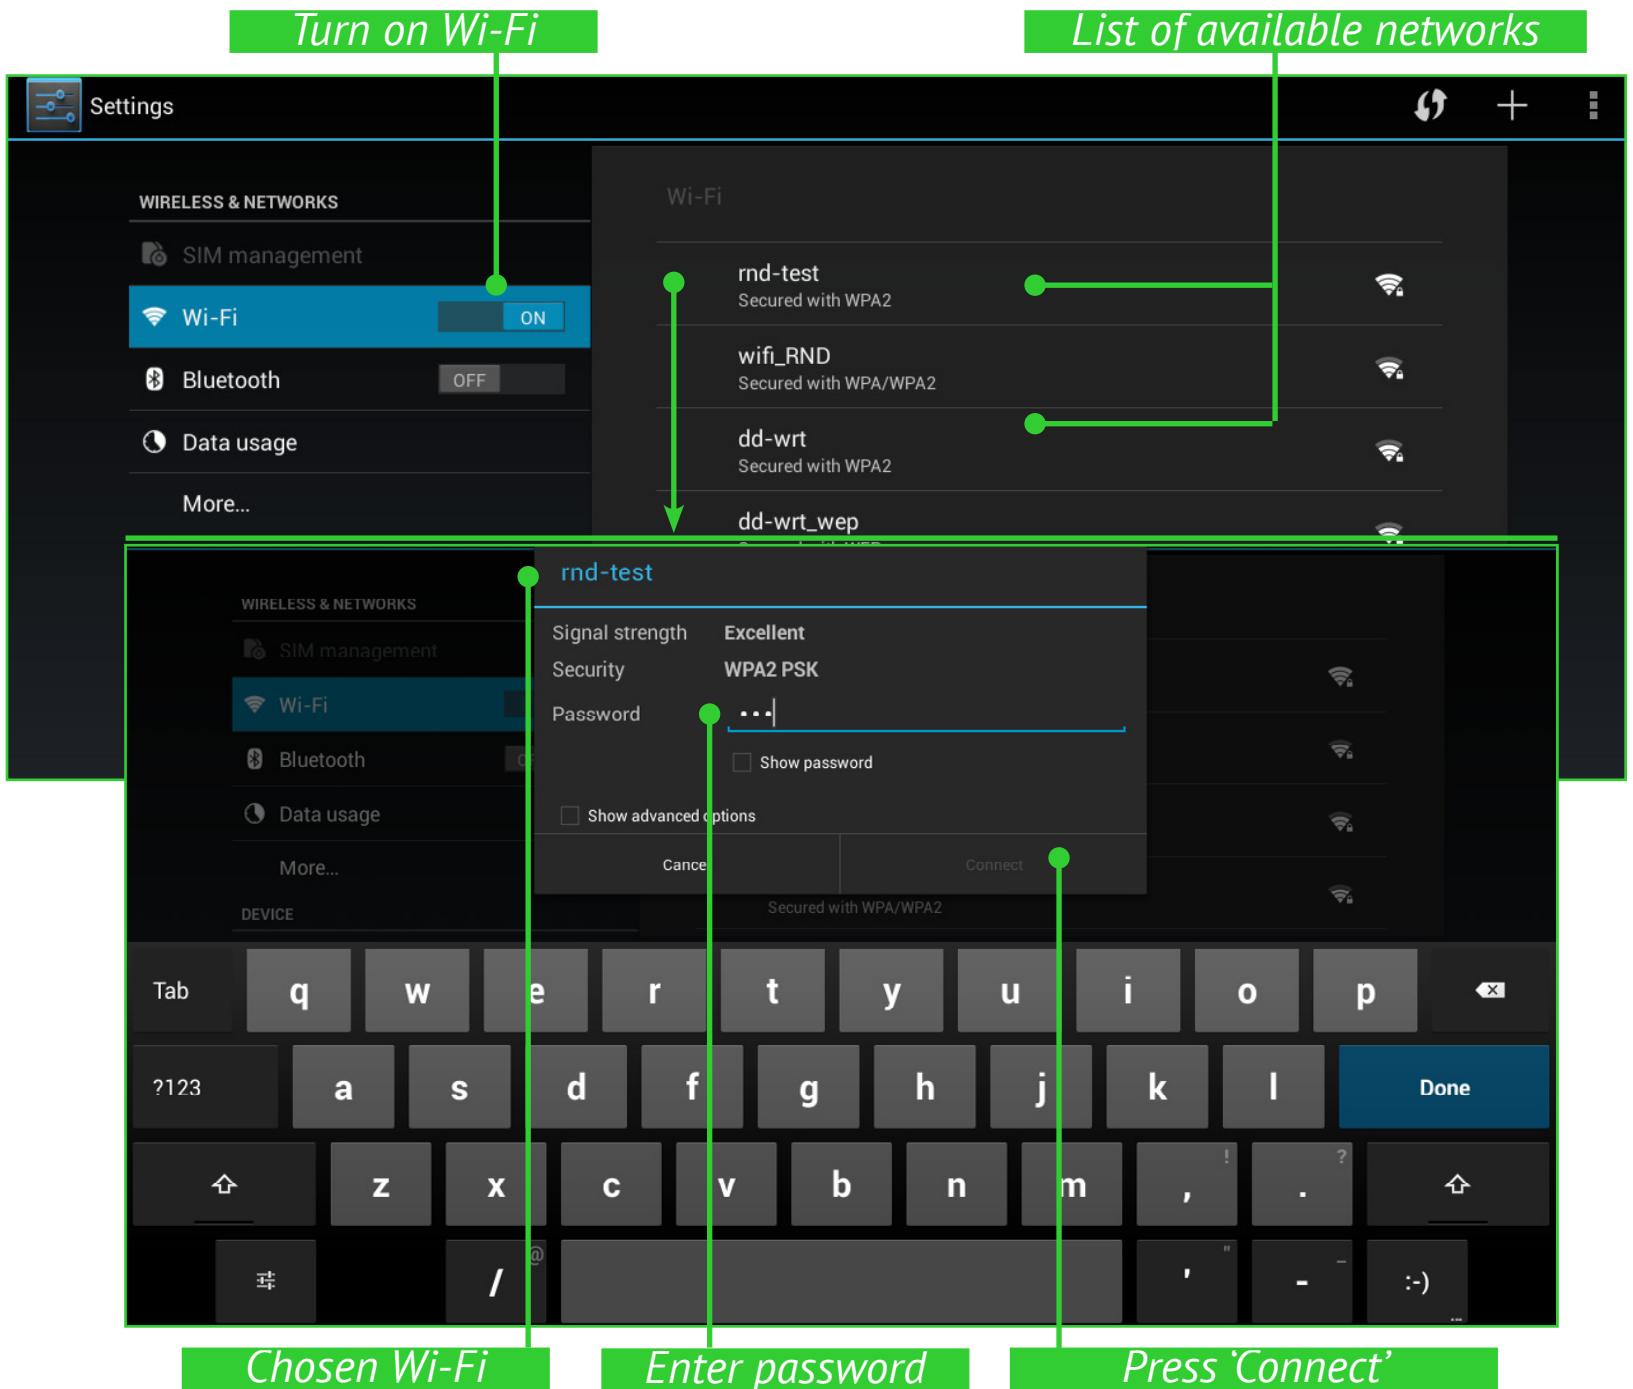

Connection to Wi-Fi Network with Manual Configuring Network Settings

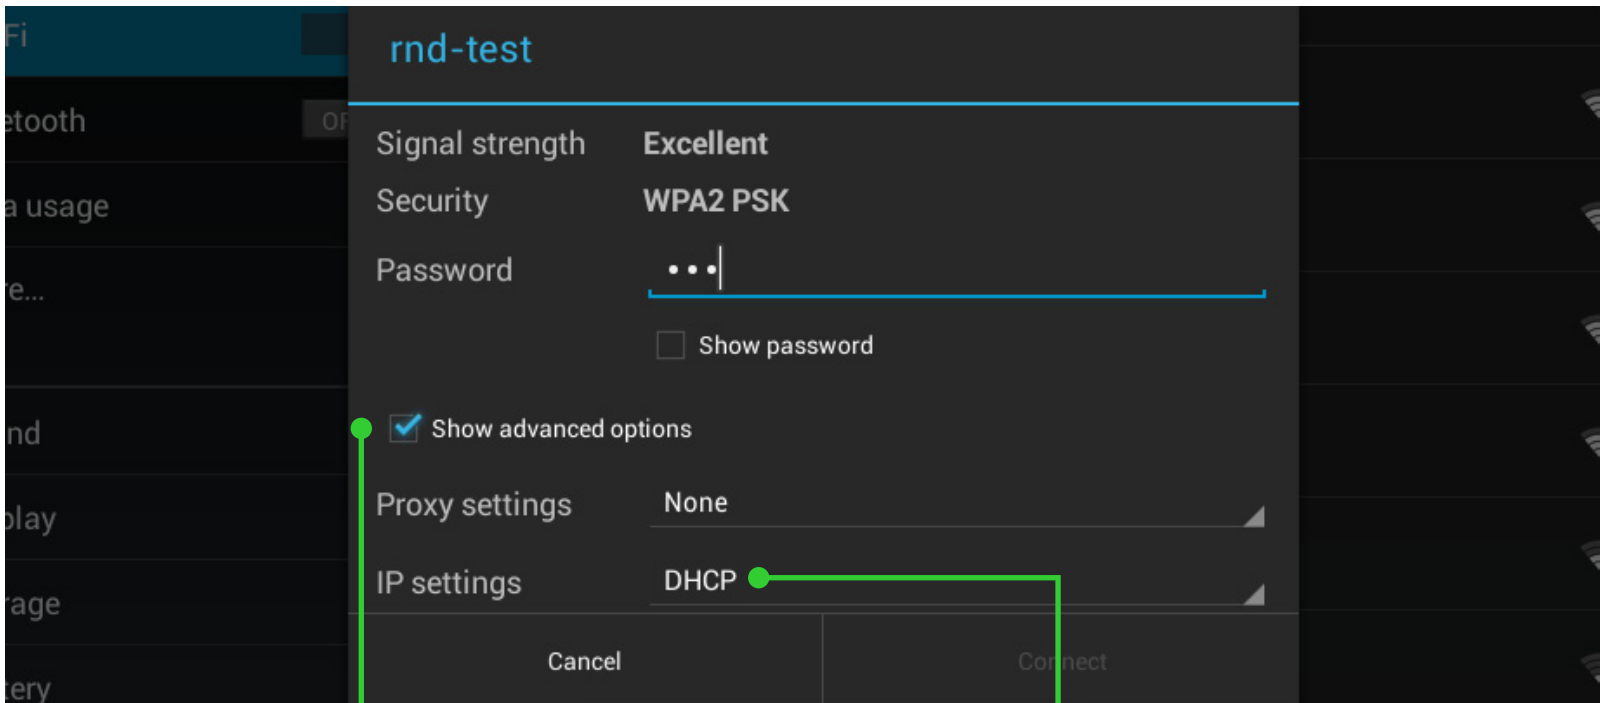

Tick it to view advanced options


Settings by default

1. To set parameters for Wi-Fi network access manually, press *Add network* in *Settings*, specify a network name, security protocol, password in the opened window and press *Save*.

2. Touch & hold a network in the list of Wi-Fi networks you've added.

Networks search

Add network

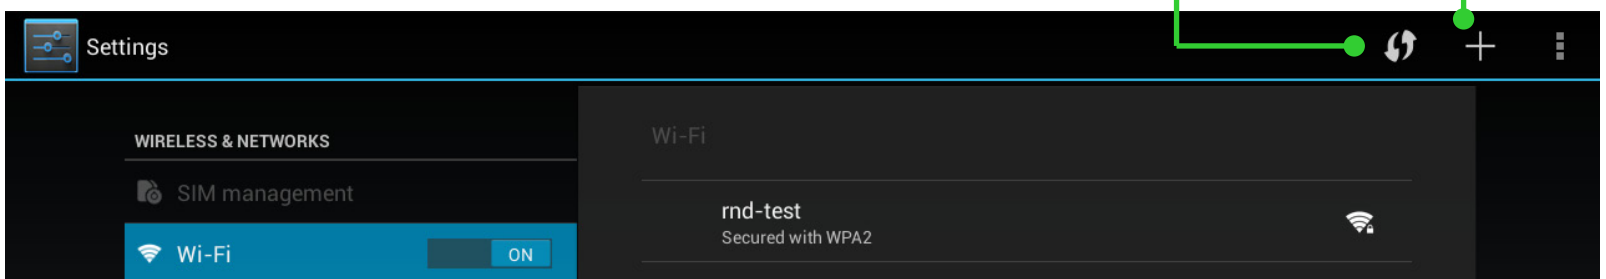

Touch *Modify network* in the dialogue, which appears. Select *Show advanced options*.

3. If the network has no proxy settings, touch *None* under *Proxy settings*, else touch *Manual* in the menu that opens.

4. Enter the proxy settings supplied by your network administrator.

5. Touch *Save*.


6. touch *Static* under *IP settings* and enter IP address, gateway, DNS.

7. Touch *Save*.

ADVANCED OPTIONS

Advanced options allow turning on/off notifications when an open network is available. To invoke them, open *Settings* > *Wi-Fi* and press the application menu button on the right top corner of the screen and touch *Advanced*.

Button for evoking advanced options

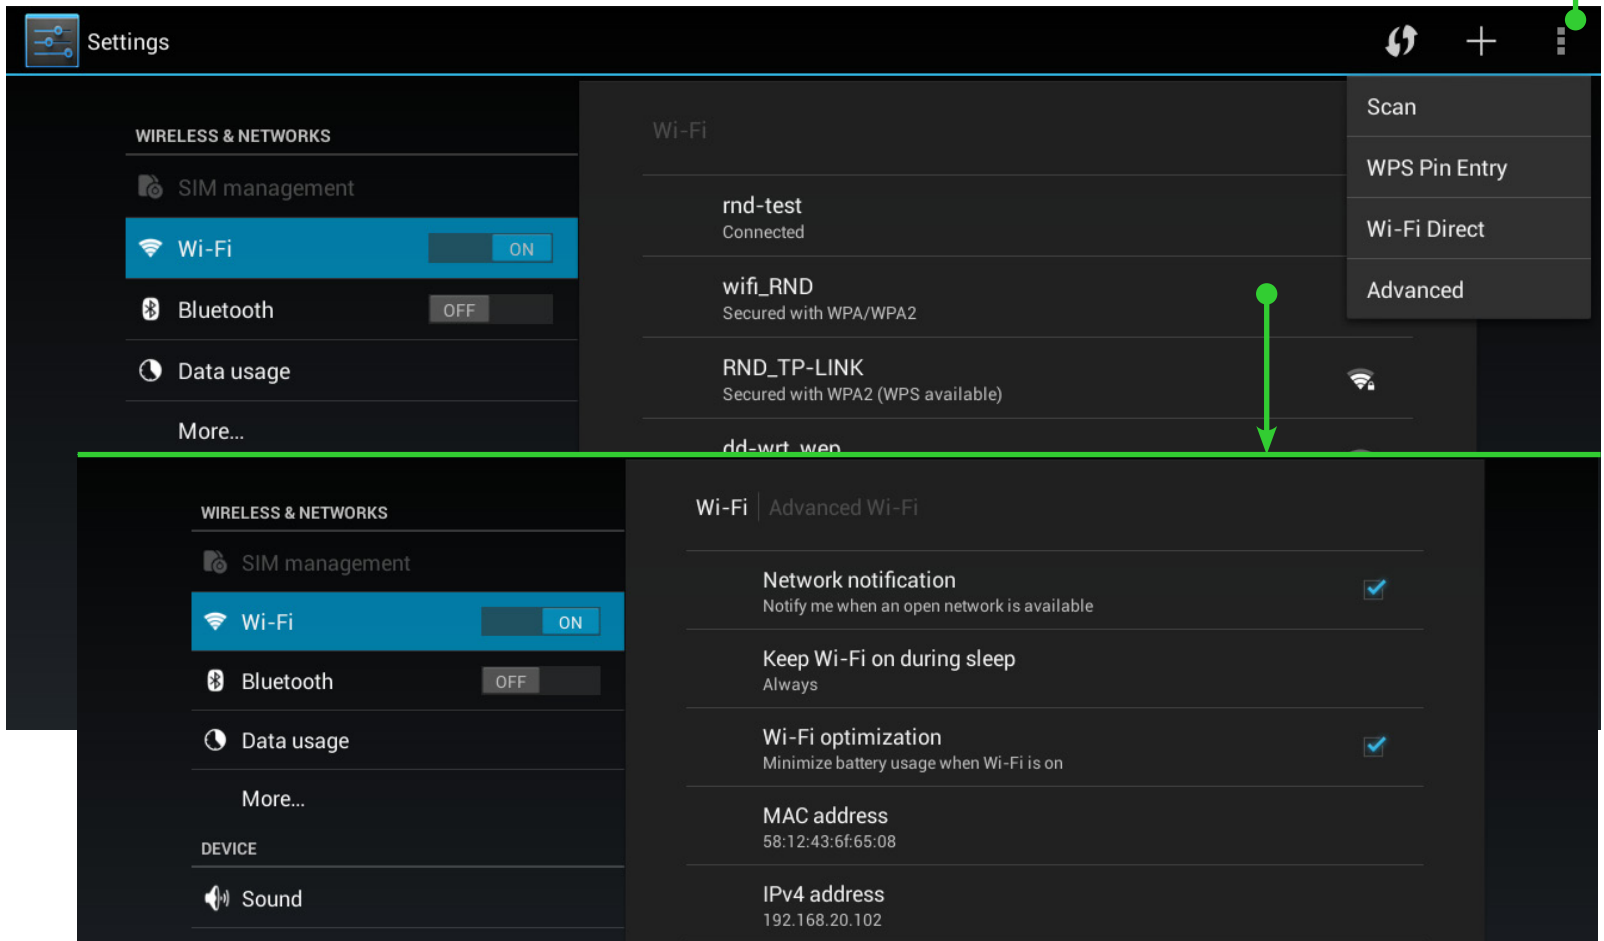

TURN OFF WI-FI

To turn off Wi-Fi module slide the *Wi-Fi* switch to the *Off* position in the *Settings* > *Wireless & networks* section.

BLUETOOTH


To establish Bluetooth connection, check the corresponding checkbox, or press power management widget button. To configure Bluetooth, go to *Bluetooth settings* section and specify Device name, set visibility and its period. To detect other devices press *Scan for devices*. To connect to the device, press its name in a list.

TRANSFERRING DATA

To transfer data between PC and the Device, connect micro-USB cable.

After you connect the cable, a notification window suggesting to turn on USB storage will popup. Press *Turn on USB storage* and the Device memory and microSD card (if present) will be displayed as USB storages in your PC Explorer or other file manager.

Now you can copy data to the Device's internal memory or microSD card. After transferring data, expand notification panel, press *Turn off USB Storage* message and press corresponding button. Now you can unplug micro-USB cable.

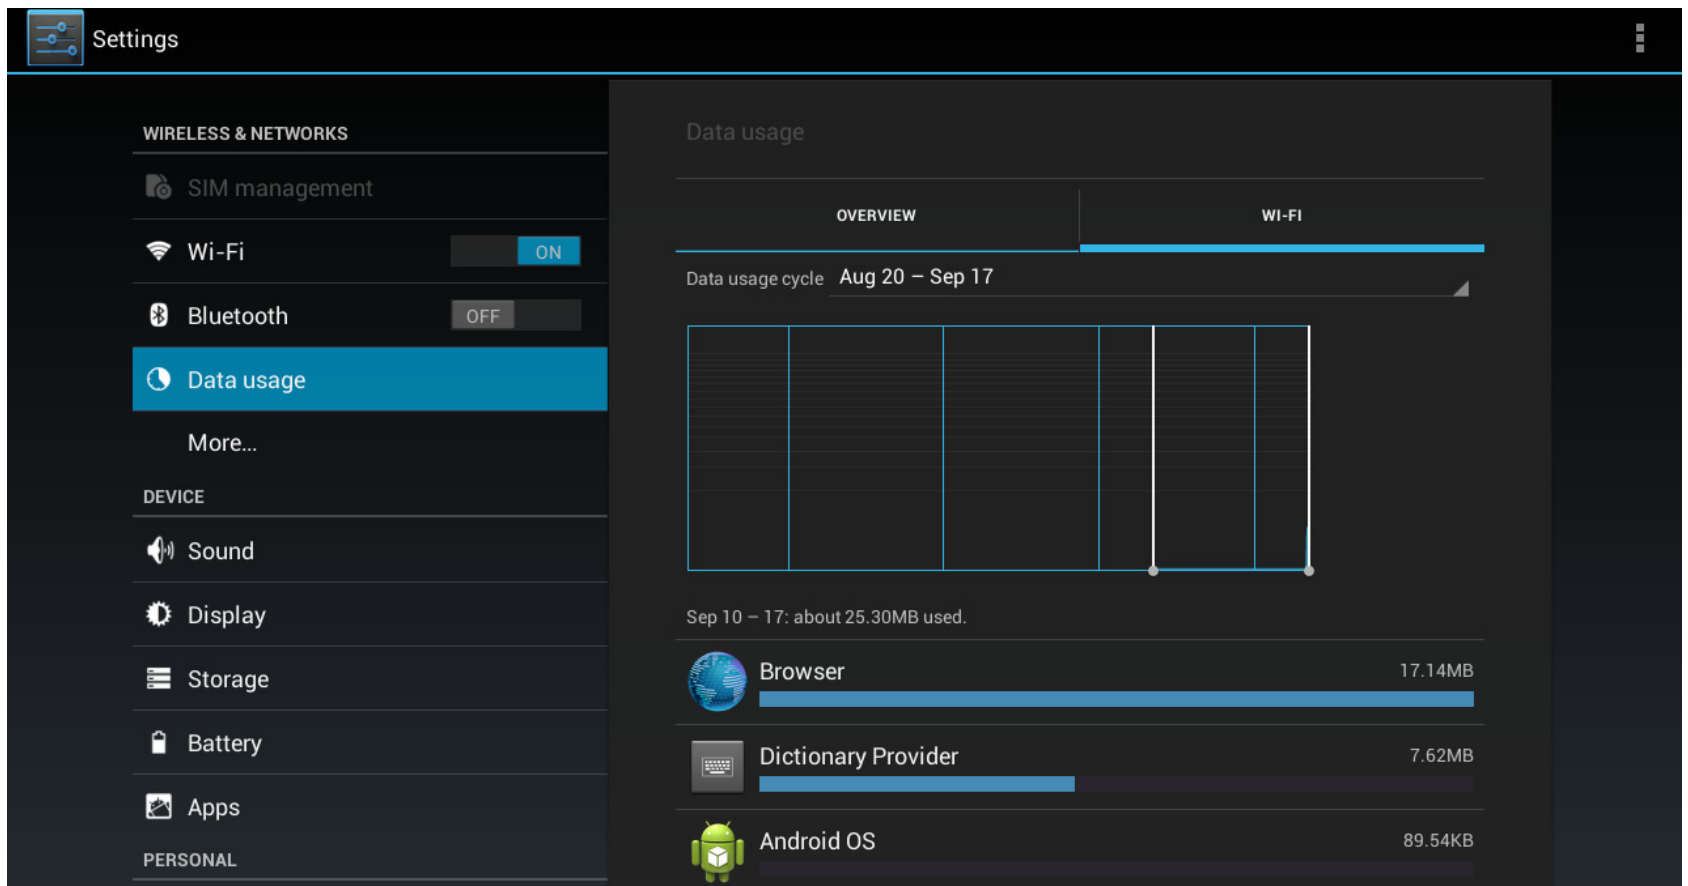


You can set additional parameters of transferring data in *Settings > Wireless & networks > Data Usage* section.

INFORMATION ABOUT APPS

To view information about installed applications you should open the applications list:

SETTINGS

- Press the menu button  at the bottom of the screen and choose *Manage apps*;
- Go to *Settings > Device > Apps*.


After pressing the application's title, you'll be able to view its detailed information, stop it if it's running and erase application data.



Memory, occupied by applications

Installed applications

Choose the applications list

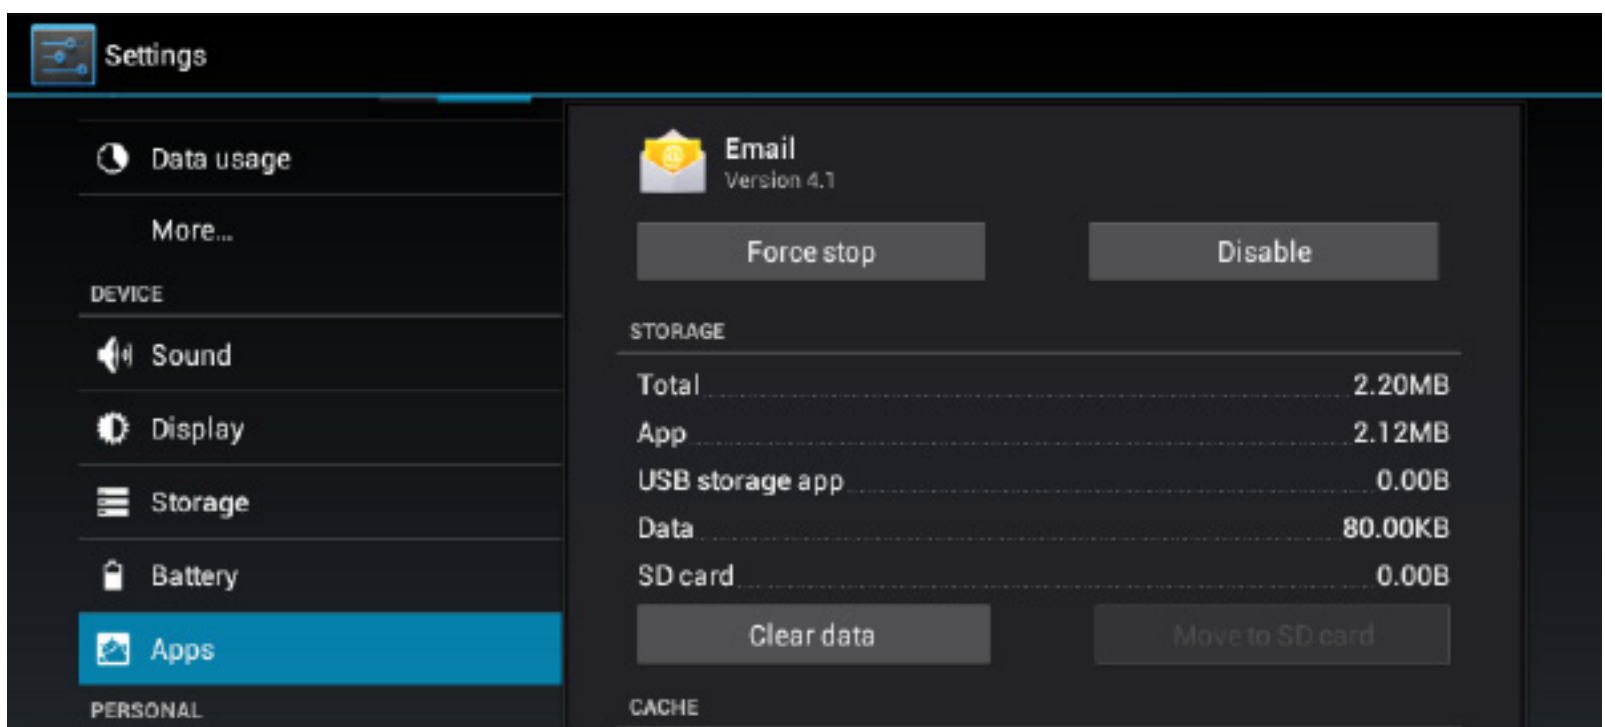

Firmware Update

Official firmware updates for the Device are published on the official PocketBook website (www.pocketbook-int.com/us). Installation of official firmware updates is recommended, as they contain fixes and additions improving the efficiency of the Device.

Official firmware updates do not influence the warranty conditions.

The warranty does not cover software installed from sources other than the official PocketBook website.

You can update firmware in several ways.

ATTENTION! Please, make sure the Device is fully charged before updating the firmware to avoid discharge during update process! This may cause severe damage of the Device's software.

AUTOMATIC UPDATE

Your Device should be connected to the Internet for this update variant.

1. Enter *Settings > System > About device > System updates* section.
2. If you'd like the Device to check for updates automatically, check *Enable or disable autoupdate* checkbox
3. To check for updates immediately, press *Check for the new firmware now*.

If firmware updates are available, the Device will automatically download and install them.

ATTENTION! Sometimes a complete set of several programs is stored in one pbi package. To install them after firmware update, please, accept an offer of the pbi package installation wizard (if it appears automatically) or launch the installation file from the 'File Manager' (see more detailed about pbi packages in the [PBI Packages Support](#) section).

MANUAL UPDATE

Variant 1

1. Download to your PC firmware version you'd like to install (www.pocketbook-int.com/us/support/pocketbook-surfpad)
2. Connect your Device to PC and copy firmware file (.upkg extension) to the internal storage or external microSD-card
3. Go to *Settings > About device > System* updates section
4. Select *SD card*. In the list appeared select the firmware version to install and press **OK**.

Variant 2

1. Download to your PC firmware version you'd like to install
2. Connect your Device to PC and copy firmware file (.upkg extension) to the internal storage or external microSD-card
3. If the Device is on, turn it off by continuous power button press and selecting the corresponding choice in switch off menu
4. Press and hold **Volume +** button and switch the Device on by pressing power button
5. *Android system recovery* menu will appear (Android logo). Now you can release **Volume +** button
6. Select *apply update from sdcard* using **Volume +/-** hardware keys and press **On/Off** key to confirm choice
7. Select the firmware file by **Volume +/-** buttons and press **On/Off** button to confirm.
8. The Device will perform all the necessary update action and will reboot.

NOTE To exit *Android system recovery*, select *reboot system now*.

Variant 3

1. Download to your PC firmware version you'd like to install
2. Connect your Device to PC and copy firmware file (.upkg extension) to the internal storage or external microSD-card
3. Go to *Settings > Backup & reset > Recovery Mode* section.
4. The Device will reboot and Firmware update will continue according to the **Variant 2** scenario, starting from **5th item**.

TROUBLESHOOTING

Issue	Solution
<p>The Device doesn't respond on screen touches or keys pressing</p>	<p>Restart the Device: Press and hold On/Off button for 10 seconds until the Device goes off. If you will continue holding On/Off button for 5 more seconds, the Device's power management system will completely reboot. To switch the Device on, press again the power button as usual.</p> <p>If it does not help, press Reset button on side panel with some thin item.</p>
<p>After turning on the Device only splash screen is displayed (the lock screen isn't loaded)</p>	<ul style="list-style-type: none"> • Turn the Device off by continuous power button press • Press and hold Volume + button and switch the Device on by pressing power button • <i>Android system recovery</i> menu will appear (Android logo with exclamation mark). Now you can release Volume + button • Select <i>wipe data/factory reset</i> using Volume +/- hardware keys and press On/Off key to confirm choice. • Select yes – delete all user data and press Menu • Under service menu select <i>reboot system now</i> and press Menu

Customer Support

For detailed information about service centers in your country please use contacts below:

<i>Česko</i>	800-701-307
<i>Deutschland</i>	0-800-187-30-03
<i>France</i>	0805-080277
<i>Polska</i>	0-0-800-141-0112
<i>Slovensko</i>	0-800-606-676
<i>USA/Canada</i>	1-877-910-1520
<i>Россия</i>	8-800-100-6990
<i>Україна</i>	0-800-304-800
<i>Казахстан</i>	8-800-333-35-13
<i>Беларусь</i>	8-820-0011-02-62
<i>საქართველო</i>	995-706-777-360



www.pocketbook-int.com/support/



help@pocketbook-int.com

Compliance with International Standards

The EUT should be supplied by USB port from complied Limited Power Source of personal computer or notebook.

The EUT should be supplied by Adapter from complied Limited Power Source.

AC Power:

Manufacturer: TIANYIN ELECTRONICS

Model: TPA-915200VUF

Rated output voltage: DC 5.0V 2.0A

IMPORTANT: Changes or modifications to this product not authorized could void the EMC and wireless compliance and negate your authority to operate the product. This product has demonstrated EMC compliance under conditions that included the use of compliant peripheral devices and shielded cables between system components. It is important that you use compliant peripheral devices and shielded cables between system components to reduce the possibility of causing interference to radios, televisions, and other electronic devices.

CE0678!

European Community Compliance Statement

This equipment is marked with the 0678 symbol and can be used throughout the European community.

This indicates compliance with the R&TTE Directive 1999/5/EC and meets the relevant parts of following technical specifications:

EN 300 328 – Electromagnetic compatibility and Radio spectrum Matters (ERM); Wideband Transmission Systems; Data transport equipment operating in the 2.4 GHz ISM band and using wide band modulation techniques; Harmonized EN covering essential requirements under article 3.2 of the R&TTE Directive

EN 301 489-1 – Electromagnetic compatibility and Radio spectrum Matters (ERM); ElectroMagnetic Compatibility (EMC) standard for radio equipment and services; Part 1: Common technical requirements

ETSI EN 301 489-7 – Electromagnetic compatibility and Radio spectrum Matters (ERM); ElectroMagnetic Compatibility (EMC) standard for radio equipment and services; Part 7: Specific conditions for mobile and portable radio and ancillary equipment of digital cellular radio telecommunications systems (GSM and DCS)

EN 301 489-17 – Electromagnetic compatibility and Radio spectrum Matters (ERM); EMC standard for radio equipment and services; Part 17: Specific conditions for 2.4 GHz wideband transmission systems and 5 GHz high performance RLAN equipment

ETSI EN 301 489-24 – Electromagnetic compatibility and Radio spectrum Matters (ERM); ElectroMagnetic Compatibility (EMC) standard for radio equipment and services; Part 24: Specific conditions for IMT-2000 CDMA Direct Spread (UTRA) for Mobile and portable (UE) radio and ancillary equipment

ETSI EN 301 511 – Global System for Mobile communications (GSM); Harmonized EN for mobile stations in the GSM 900 and GSM 1 800 bands covering essential requirements under article 3.2 of the R&TTE directive (1999/5/EC)

ETSI EN 301 908-1 – Electromagnetic compatibility and Radio spectrum Matters (ERM); Base Stations (BS), Repeaters and User Equipment (UE) for IMT-2000 Third-Generation cellular networks; Part 1: Harmonized EN for IMT-2000, introduction and common requirements, covering essential requirements of article 3.2 of the R&TTE Directive

EN 60950-1 – Information technology equipment - Safety - Part 1: General requirements

EN 62311: 2008 – Assessment of electronic and electrical equipment related to human exposure restrictions for electromagnetic fields (0 Hz-300 GHz)

Marking by the symbol indicates that usage restrictions apply.

France - 2.4GHz for Metropolitan France:

In all Metropolitan departments, wireless LAN frequencies can be used under the following conditions, either for public or private use:

- Indoor use: maximum power (EIRP*) of 100 mW for the entire 2400-2483.5 MHz frequency band
- Outdoor use: maximum power (EIRP*) of 100 mW for the 2400-2454 MHz band and with maximum power (EIRP*) of 10 mW for the 2454-2483 MHz band

Certification information (SAR) The device meets guidelines for exposure to radio waves

Your device is a radio transmitter and receiver. It is designed not to exceed the limits for exposure to radio waves recommended by international guidelines. These guidelines were developed by the independent scientific organization ICNIRP and include safety margins designed to assure the protection of all persons, regardless of age and health.

The exposure guidelines for devices employ a unit of measurement known as the Specific Absorption Rate or SAR. The SAR limit stated in the ICNIRP guidelines is 2.0 watts/kilogram (W/kg) averaged over 10 grams of tissue. Tests for SAR are conducted using standard operating positions with the device transmitting at its highest certified power level in all tested frequency bands.

This equipment complies with the European Council Recommendation of 12 July 1999 on the Limitation of Exposure of the General Public to Electromagnetic Fields [1999/519/EC].